

# FIELDVUE™ DVC6200 Digital Valve Controller

www.FIELDVUE.com

For the telephone number of the Emerson Process Management sales office nearest you, contact:

### In North America

Fisher Controls International LLC  
1 (641) 754-3011

### In Latin America

Fisher Controls International LLC  
1 (314) 746-9900

### In Asia Pacific

Emerson Process Management  
Asia Pacific Private Ltd.  
(65) 6777-8211

### In Europe

Emerson Process Management Ltd.  
+44 1634 895800



475 Field Communicator

For equipment service or support needs, contact your local Emerson Process Management sales office.




www.Fisher.com

D103411X012 April 2012

Fisher and FIELDVUE are marks owned by one of the companies in the Emerson Process Management business unit of Emerson Electric Co. Emerson, Emerson Process Management, and the Emerson logo are trademarks and service marks of Emerson Electric Co. HART is a mark owned by the HART Communication Foundation. All other marks are the property of their respective owners.

© 2010, 2012 Fisher Controls International LLC. All rights reserved.

## Field Communicator Menu Tree - DVC6200 Digital Valve Controller

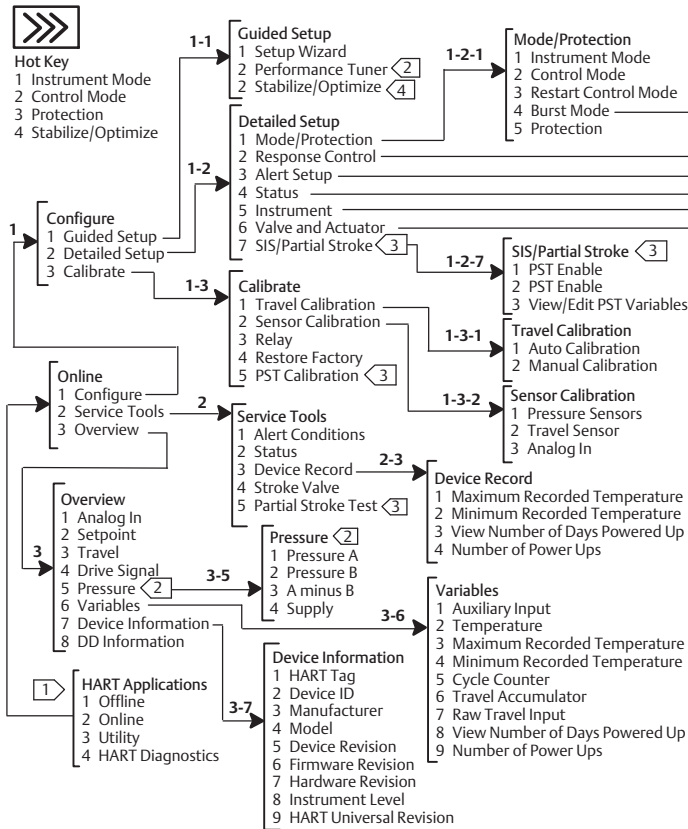


### Notes:

1-1-1 indicates fast-key sequence to reach menu


- 1 This menu is available by pressing the left arrow key from the previous menu
- 2 Instrument level AD, PD, and ODV only
- 3 Instrument level ODV only
- 4 Instrument level HC only
- 5 Instrument level HC, AD, and PD only
- 6 Fast key sequence for Alert Record with instrument level ODV is 1-2-3-7

## Instrument Level HC, AD, PD, and ODV

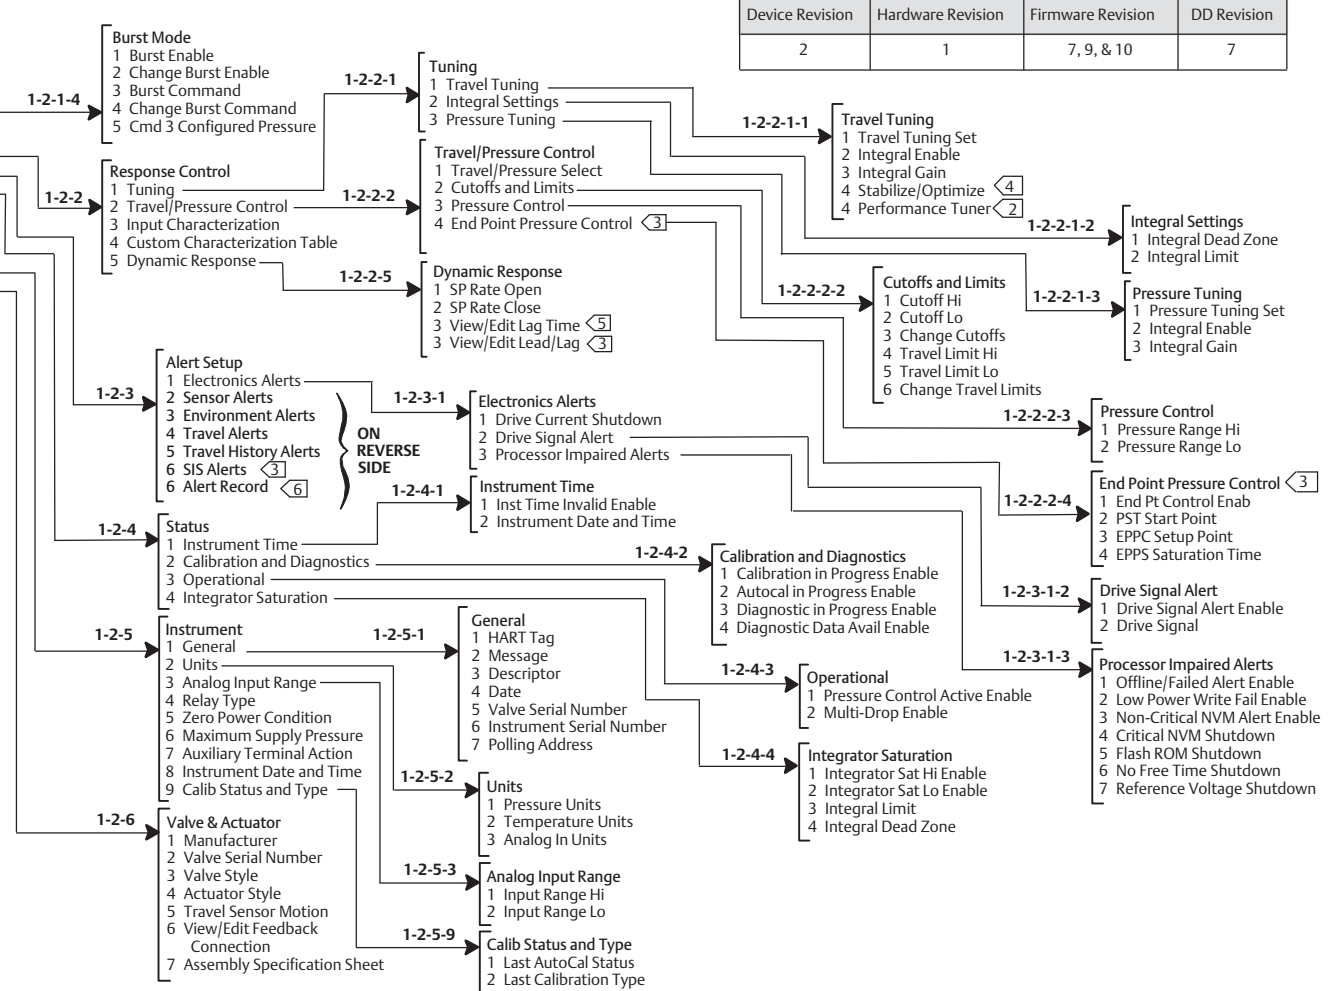

## Menu Tree applies to:

Device Revision	Hardware Revision	Firmware Revision	DD Revision
2	1	7, 9, & 10	7

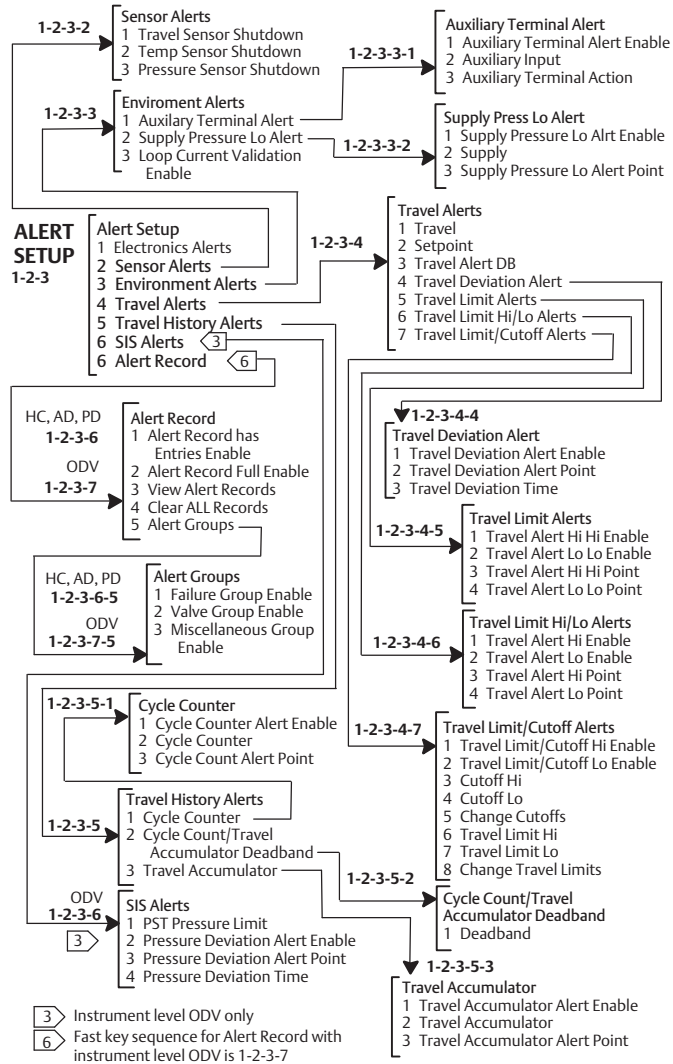

Function/Variable	Fast-Key Sequence
Actuator Style	1-2-6-4
Alert Conditions	2-1
Alert Record	1-2-3-6
	1-2-3-7
Analog Input	3-1
Analog Input Range	1-2-5-3
Analog Input Units	1-2-5-2-3
Auxiliary Input	3-6-1
Auxiliary Terminal Action	1-2-5-7
Burst Mode	1-2-1-4
Calibrate	1-3
Calibration and Diagnostics (Status)	1-2-4-2
Calibration Status and Type	1-2-5-9
	Hot Key-2
	1-2-1-2
Control Mode	3-6-5
Cycle Counter	1-2-2-4
Custom Characterization Table	1-2-2-4
Cutoffs and Limits	1-2-2-2-2
Date	1-2-5-1-4
Descriptor	1-2-5-1-3
Device Description (DD) Information	3-8
Device ID	3-7-2
Device Revision	3-7-5
Drive Signal	3-4
Electronics Alerts	1-2-3-1
End Point Pressure Control <sup>(3)</sup>	1-2-2-2-4
Environment Alerts	1-2-3-3
Feedback Connection, View/Edit	1-2-6-6
Firmware Revision	3-7-6
Hardware Revision	3-7-7
	1-2-5-1-1
HART Tag	3-7-1
HART Universal Revision	3-7-9
Input Characterization	1-2-2-3
Instrument Date and Time	1-2-5-8
Instrument Level	3-7-8

Function/Variable	Fast-Key Sequence
Instrument Mode	Hot Key-1
	1-2-1-1
Instrument Serial Number	1-2-5-1-6
Instrument Time (Status)	1-2-4-1
Integrator Saturation (Status)	1-2-4-4
Integral Settings	1-2-2-1-2
Lag Time, View/Edit <sup>(4)</sup>	1-2-2-5-3
Lead/Lag, View/Edit <sup>(3)</sup>	1-2-2-5-3
Manufacturer (Valve & Actuator)	1-2-6-1
Manufacturer (Device Information)	3-7-3
Maximum Supply Pressure	1-2-5-6
Message	1-2-5-1-2
Model (Device Information)	3-7-4
	2-3-4
Number of Power Ups	3-6-9
Operational (Status)	1-2-4-3
Partial Stroke Test <sup>(3)</sup>	2-5
Partial Stroke Test Enable <sup>(3)</sup>	1-2-7-1
Partial Stroke Test Variables, View/Edit <sup>(3)</sup>	1-2-7-3
Performance Tuner <sup>(2)</sup>	1-1-2
Polling Address	1-2-5-1-7
Pressure	3-5
Pressure Control	1-2-2-2-3
Pressure Tuning	1-2-2-1-3
Pressure Units	1-2-5-2-1
	Hot Key-3
Protection	1-2-1-5
PST Calibration <sup>(3)</sup>	1-3-5
Raw Travel Input	3-6-7
Relay (Calibration)	1-3-3
Relay Type	1-2-5-4
Restart Control Mode	1-2-1-3
Restore Factory Settings (Calibrate)	1-3-4
Sensor Alerts	1-2-3-2
Sensor Calibration	1-3-2

Function/Variable	Fast-Key Sequence
Set Point Rate Close	1-2-2-5-2
Set Point Rate Open	1-2-2-5-1
Setup Wizard	1-1-1
SIS Alerts <sup>(3)</sup>	1-2-3-6
Stabilize/Optimize	Hot Key-4
	1-1-2 <sup>(5)</sup>
Status	2-2
Stroke Valve	2-4
Temperature	3-6-2
	2-3-1
Temperature, Maximum Recorded	3-6-3
	2-3-2
Temperature, Minimum Recorded	3-6-4
Temperature Units	1-2-5-2-2
Travel	3-3
Travel Accumulator	3-6-6
Travel Alerts	1-2-3-4
Travel Calibration	1-3-1
Travel History Alerts	1-2-3-5
Travel Sensor Motion	1-2-6-5
Travel Set Point	3-2
Travel Tuning	1-2-2-1-1
Travel/Pressure Select	1-2-2-2-1
	1-2-5-1-5
Valve Serial Number	1-2-6-2
Valve Style	1-2-6-3
	2-3-3
View Number of Days Powered Up	3-6-8
Zero Power Condition	1-2-5-5

**NOTE:** *Italicized Fast-Key Sequence* indicates fast-key sequence is applicable only for instrument level ODV.  
 2. Instrument level AD, PD, and ODV only.  
 3. Instrument level ODV only.  
 4. Instrument level HC, AD, and PD only.  
 5. Instrument level HC only.