

This operation guide describes installation, wiring, and other tasks required to make the controller ready for operation.

For details of the each function, refer to the electronic manual. User's manuals can be downloaded or viewed at the following URL.

<http://www.yokogawa.com/ns/ut/im/>

## Contents

1. Safety Precautions
2. Model and Suffix Codes
3. How to Install
4. Hardware Specifications
5. How to Connect Wires
6. Terminal Wiring Diagrams

## Introduction

Thank you for purchasing the UT32A Digital Indicating Controller (Entry model). This operation guide describes the basic operations of the UT32A. The guide should be provided to the end user of this product.

Be sure to read this operation guide before using the product in order to ensure correct operation.

For details of each function, refer to the electronic manual. Before using the product, refer to the table of Model and Suffix Codes to make sure that the delivered product is consistent with the model and suffix codes you ordered. Also make sure that the following items are included in the package.

- Digital Indicating Controller (the model you ordered).....x1
- Set of Brackets.....x1
- Unit Label (L4502VZ).....x1
- Tag Label (L4502VE).....x1
- (Only when ordered.)
- Operation Guide (this document).....x5 (A3 size)
- (Installation and Wiring, Initial Settings, Operations, and Parameters)

- Target Readers
- This guide is intended for the following personnel;
- Engineers responsible for installation, wiring, and maintenance of the equipment.
- Personnel responsible for normal daily operation of the equipment.

## 1. Safety Precautions

The following symbol is used on the instrument. It indicates the possibility of injury to the user or damage to the instrument, and signifies that the user must refer to the user's manual for special instructions. The same symbol is used in the user's manual on pages that the user needs to refer to, together with the term "WARNING" or "CAUTION."

**WARNING**

**Calls attention to actions or conditions that could cause serious or fatal injury to the user, and indicates precautions that should be taken to prevent such occurrences.**

**CAUTION**

**Calls attention to actions or conditions that could cause injury to the user or damage to the instrument or property and indicates precautions that should be taken to prevent such occurrences.**

~ AC

~ AC/DC

The equipment wholly protected by double insulation or reinforced insulation.

Functional grounding terminals  
(Do not use this terminal as a protective grounding terminal).

### Note

Identifies important information required to operate the instrument.

### ■ Warning and Disclaimer

- (1) YOKOGAWA makes no warranties regarding the product except those stated in the WARRANTY that is provided separately.
- (2) The product is provided on an "as is" basis. YOKOGAWA assumes no liability to any person or entity for any loss or damage, direct or indirect, arising from the use of the product or from any unpredictable defect of the product.

### ■ Safety, Protection, and Modification of the Product

- (1) In order to protect the system controlled by this product and the product itself, and to ensure safe operation, observe the safety precautions described in the user's manual. Use of the instrument in a manner not prescribed herein may compromise the product's functions and the protection features inherent in the device. We assume no liability for safety, or responsibility for the product's quality, performance or functionality should users fail to observe these instructions when operating the product.
- (2) Installation of protection and/or safety circuits with respect to a lightning protector; protective equipment for the system controlled by the product and the product itself; foolproof or fail-safe design of a process or line using the system controlled by the product or the product itself; and/or the design and installation of other protective and safety circuits are to be appropriately implemented as the customer deems necessary.
- (3) Be sure to use the spare parts approved by YOKOGAWA when replacing parts or consumables.
- (4) This product is not designed or manufactured to be used in critical applications that directly affect or threaten human lives. Such applications include nuclear power equipment, devices using radioactivity, railway facilities, aviation equipment, air navigation facilities, aviation facilities, and medical equipment. If so used, it is the user's responsibility to include in the system additional equipment and devices that ensure personnel safety.
- (5) Modification of the product is strictly prohibited.
- (6) This product is intended to be handled by skilled/trained personnel for electric devices.
- (7) This product is UL Recognized Component. In order to comply with UL standards, end-products are necessary to be designed by those who have knowledge of the requirements.



- **Power Supply**  
Ensure that the instrument's supply voltage matches the voltage of the power supply before turning ON the power.
- **Do Not Use in an Explosive Atmosphere**  
Do not operate the instrument in locations with combustible or explosive gases or steam. Operation in such environments constitutes an extreme safety hazard. Use of the instrument in environments with high concentrations of corrosive gas (H<sub>2</sub>S, SO<sub>x</sub>, etc.) for extended periods of time may cause a failure.
- **Do Not Remove Internal Unit**  
The internal unit should not be removed by anyone other than YOKOGAWA's service personnel. There are dangerous high voltage parts inside. Additionally, do not replace the fuse by yourself.
- **Damage to the Protective Construction**  
Operation of the instrument in a manner not specified in the user's manual may damage its protective construction.



**This instrument is an EMC class A product. In a domestic environment this product may cause radio interference in which case the user needs to take adequate measures.**

## 2. Model and Suffix Codes

### ■ UT32A (Entry model)

Model	Suffix code	Optional suffix code	Description
UT32A			Digital Indicating Controller (Power supply: 100-240 V AC) (provided with 2 DOs)
Type 1: Basic control	-V		Voltage pulse output type
	-C		Current output type
	-R		Relay output type
Type 2: Functions	0		None
	1		RS-485 communication (Max. 38.4 kbps, 2-wire/4-wire) (*1)
Type 3: Fixed code	0		None
Display language (*2)	-1		English (Default. Can be switched to other language by the setting.)
	-2		German (Default. Can be switched to other language by the setting.)
	-3		French (Default. Can be switched to other language by the setting.)
	-4		Spanish (Default. Can be switched to other language by the setting.)
Case color	0		White (Light gray)
	1		Black (Light charcoal gray)
Fixed code		-00	Always "-00"
Optional suffix codes	/LP		24 V DC loop power supply
	/DC		Power supply 24 V AC/DC
	/CT		Coating (*3)
	/CV		Terminal cover

- \*1: When the /LP option is specified, the RS-485 communication of the Type 2 code "1" is 2-wire system.
- \*2: English, German, French, and Spanish are available for the guide display.
- \*3: When the /CT option is specified, the UT32A does not conform to the safety standards (UL and CSA) and CE marking (Products with /CT option are not intended for EEA-market).

### ■ Accessories (sold separately)

The following is an accessory sold separately.

- LL50A Parameter Setting Software

Model	Suffix code	Description
LL50A	-00	Parameter Setting Software

- External Precision Resistor

Model	Suffix code	Description
X010		See the General Specifications (*) Resistance Module

\*: Necessary to input the current signal to the voltage input terminal.

- Terminal Cover: Model UTAP002
- User's Manual (A4 size)  
Note: User's Manual can be downloaded from a website.
- Brackets  
Part number: L4502TP (2 pcs for upper and lower sides)

- Authorised Representative in the EEA  
Yokogawa Europe BV. (Address: Euroweg 2 , 3825 HD Amersfoort, The Netherlands) is the Authorised Representative of Yokogawa Electric Corporation for this Product in the EEA.
- Printed Manuals

Model	Description
UT35A/UT32A Digital Indicating Controller Operation Guide (Standard code model)	IM 05P01D31-11EN
UT35A/UT32A Digital Indicating Controller Operation Guide (Detailed code model)	IM 05P01D31-15EN
UT35A/MDL, UT32A/MDL Controller (Mount on DIN Rail) Operation Guide (Standard code model)	IM 05P01D81-11EN
UT32A-D Digital Indicating Controller (Dual-loop type) Operation Guide	IM 05P08D31-11EN
UT32A-D/MDL Controller (Dual-loop type, Mount on DIN Rail) Operation Guide	IM 05P08D81-11EN
UT35A/RSP, UT32A/RSP Digital Indicating Controller (Non-isolated RSP) Operation Guide (Standard code model)	IM 05P01D31-81EN
UT32A Digital Indicating Controller (Entry model) Operation Guide (Standard code model)	IM 05P01F31-11EN
Precautions on the Use of the UTAdvanced Series	IM 05P01A01-11EN

- Electronic Manuals  
You can download the latest manuals from the following website:  
URL: <http://www.yokogawa.com/ns/ut/im/>

Model	Description
UT35A/UT32A Digital Indicating Controller Operation Guide (Standard code model)	IM 05P01D31-11EN
UT35A/UT32A Digital Indicating Controller Operation Guide (Detailed code model)	IM 05P01D31-15EN
UT35A/MDL, UT32A/MDL Controller (Mount on DIN Rail) Operation Guide (Standard code model)	IM 05P01D81-11EN
UT35A/UT32A Digital Indicating Controller User's Manual	IM 05P01D31-01EN
UT32A-D Digital Indicating Controller (Dual-loop type) Operation Guide	IM 05P08D31-11EN
UT32A-D/MDL Controller (Dual-loop type, Mount on DIN Rail) Operation Guide	IM 05P08D81-11EN
UT32A-D, UT32A-D/MDL Digital Indicating Controller User's Manual	IM 05P08D31-01EN
UT35A/RSP, UT32A/RSP Digital Indicating Controller (Non-isolated RSP) Operation Guide (Standard code model)	IM 05P01D31-81EN
UT32A Digital Indicating Controller (Entry model) Operation Guide (Standard code model)	IM 05P01F31-11EN
UT32A Digital Indicating Controller (Entry model) User's Manual (Standard code model)	IM 05P01F31-01EN
UTAdvanced Series Communication Interface (RS-485, Ethernet) User's Manual	IM 05P07A01-01EN
UTAdvanced Series Communication Interface (Open Network) User's Manual	IM 05P07A01-02EN
LL50A Parameter Setting Software Installation Manual	IM 05P05A01-01EN
LL50A Parameter Setting Software User's Manual	IM 05P05A01-02EN
Precautions on the Use of the UTAdvanced Series	IM 05P01A01-11EN

- General Specification

Model	Description
UT35A/UT32A Digital Indicating Controller	GS 05P01D31-01EN
UT35A/MDL, UT32A/MDL Controller (Mount on DIN Rail)	GS 05P01D81-11EN
UT32A-D Digital Indicating Controller (Dual-loop type)	GS 05P08D31-01EN
UT32A-D/MDL Controller (Dual-loop type, Mount on DIN Rail)	GS 05P08D81-01EN
LL50A Parameter Setting Software	GS 05P05A01-01EN


- \* The last two characters of the manual number and general specification number indicate the language in which the manual is written.

## 3. How to Install

### ■ Installation Location

The instrument should be installed in indoor locations meeting the following conditions:

- **Instrumented panel**  
This instrument is designed to be mounted in an instrumented panel. Mount the instrument in a location where its terminals will not inadvertently be touched.
- **Well ventilated locations**  
Mount the instrument in well ventilated locations to prevent the instrument's internal temperature from rising. However, make sure that the terminal portions are not exposed to wind. Exposure to wind may cause the temperature sensor accuracy to deteriorate. To mount multiple indicating controllers, see the external dimensions/panel cutout dimensions which follow. If mounting other instruments adjacent to the instrument, comply with these panel cutout dimensions to provide sufficient clearance between the instruments.
- **Locations with little mechanical vibration**  
Install the instrument in a location subject to little mechanical vibration.
- **Horizontal location**  
Mount the instrument horizontally and ensure that it is level, with no inclination to the right or left.

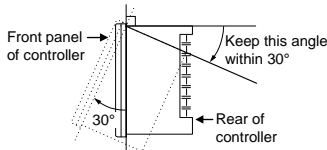

### Note


If the instrument is moved from a location with low temperature and low humidity to a place with high temperature and high humidity, or if the temperature changes rapidly, condensation will result. Moreover, in the case of thermocouple inputs, measurement errors will result. To avoid such a situation, leave the instrument in the new environment under ambient conditions for more than 1 hour prior to using it.

Do not mount the instrument in the following locations:

- **Outdoors**
- **Locations subject to direct sunlight or close to a heater**  
Install the instrument in a location with stable temperatures that remain close to an average temperature of 23°C. Do not mount it in locations subject to direct sunlight or close to a heater. Doing so adversely affects the instrument.
- **Locations with substantial amounts of oily fumes, steam, moisture, dust, or corrosive gases**  
The presence of oily fumes, steam, moisture, dust, or corrosive gases adversely affects the instrument. Do not mount the instrument in locations subject to any of these substances.
- **Areas near electromagnetic field generating sources**  
Do not place magnets or tools that generate magnetism near the instrument. If the instrument is used in locations close to a strong electromagnetic field generating source, the magnetic field may cause measurement errors.
- **Locations where the display is difficult to see**  
The instrument uses an LCD for the display unit, and this can be difficult to see from extremely oblique angles. Mount the instrument in a location where it can be seen as much as possible from the front.
- **Areas close to flammable articles**  
Absolutely do not place the instrument directly on flammable surfaces. If such a circumstance is unavoidable and the instrument must be placed close to a flammable item, provide a shield for it made of 1.43 mm thick plated steel or 1.6 mm thick unplated steel with a space of at least 150 mm between it and the instrument on the top, bottom, and sides.
- **Areas subject to being splashed with water**



**Be sure to turn OFF the power supply to the controller before installing it on the panel to avoid an electric shock.**

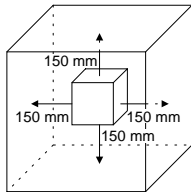

**YOKOGAWA**

YOKOGAWA ELECTRIC CORPORATION  
Network Solutions Business Division  
2-9-32, Naka-cho Musashino-shi, Tokyo 180-8750 JAPAN  
YOKOGAWA CORPORATION OF AMERICA  
Head office and for product sales  
2 Dart Road, Newnan, Georgia 30265, USA  
YOKOGAWA EUROPE B.V.  
Headquarters  
Euroweg 2, 3825 HD Amersfoort, THE NETHERLANDS

[www.yokogawa.com/ns](http://www.yokogawa.com/ns)


All Rights Reserved, Copyright © 2015 Yokogawa Electric Corporation

IM 05P01F31-11EN page 1/10

■ Mounting the Instrument Main Unit

Provide an instrumented panel steel sheet of 1 to 10 mm thickness.  
After opening the mounting hole on the panel, follow the procedures below to install the controller:


- 1) Insert the controller into the opening from the front of the panel so that the terminal board on the rear is at the far side.
- 2) Set the brackets in place on the top and bottom of the controller as shown in the figure below, then tighten the screws of the brackets. Take care not to overtighten them.

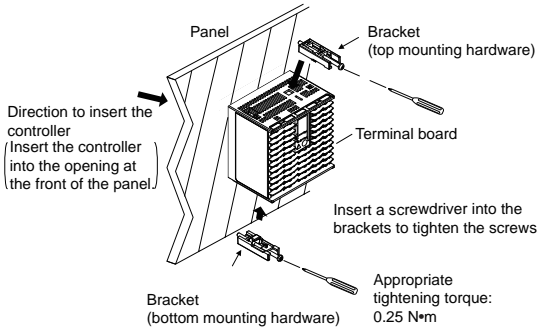

- Tighten the screws with appropriate tightening torque within 0.25 N·m. Otherwise it may cause the case deformation or the bracket damage.
- Make sure that foreign materials do not enter the inside of the instrument through the case's slit holes.

■ External Dimensions and Panel Cutout Dimensions


UT32A

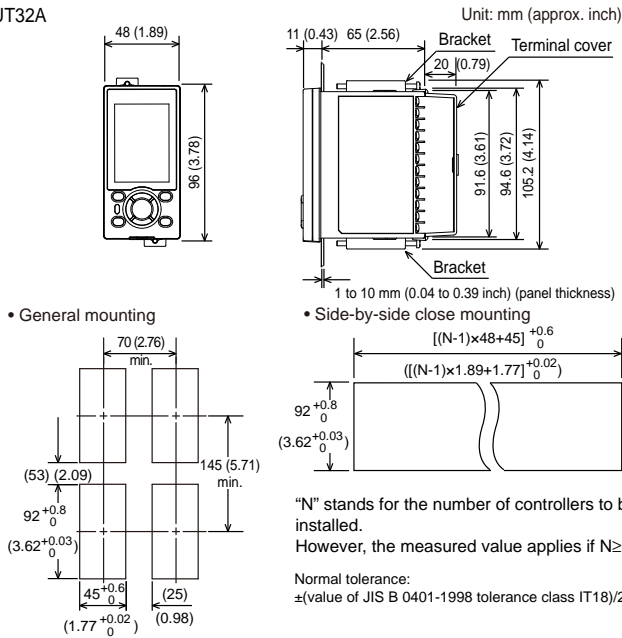

4. Hardware Specifications



This instrument is for Measurement Category No.1.  
Do not use it for measurements in locations falling under Measurement Categories No.2, No.3, and No.4.

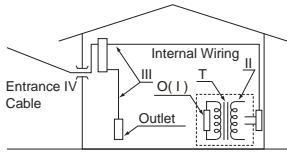

Category	IEC/EN/CSA·UL 61010-1: 2001	EN 61010-2-030	Remarks
No.1	Measurement Category I	O (Other)	For measurements performed on circuits not directly connected to MAINS.
No.2	Measurement Category II	Measurement Category II	For measurements performed on circuits directly connected to the low-voltage installation.
No.3	Measurement Category III	Measurement Category III	For measurements performed in the building installation.
No.4	Measurement Category IV	Measurement Category IV	For measurements performed at the source of the low-voltage installation.

■ Input Specifications

●Universal Input (Equipped as standard)

- Number of inputs: 1
- Input type, instrument range, and measurement accuracy: See the table below,

Input Type		Instrument Range		Accuracy
		°C	°F	
Thermo-couple	K	-270.0 to 1370.0°C	-450.0 to 2500.0°F	±0.1% of instrument range ±1 digit for 0°C or more
		-270.0 to 1000.0°C	-450.0 to 2300.0°F	±0.2% of instrument range ±1 digit for less than 0°C
		-200.0 to 500.0°C	-200.0 to 1000.0°F	±2% of instrument range ±1 digit for less than -200.0°C of thermocouple K
	J	-200.0 to 1200.0°C	-300.0 to 2300.0°F	±1% of instrument range ±1 digit for less than -200.0°C of thermocouple T
	T	-270.0 to 400.0°C	-450.0 to 750.0°F	±0.15% of instrument range ±1 digit for 400°C or more
	B	0.0 to 1800.0°C	32 to 3300°F	±5% of instrument range ±1 digit for less than 400°C
	S	0.0 to 1700.0°C	32 to 3100°F	±0.15% of instrument range ±1 digit
	R	0.0 to 1700.0°C	32 to 3100°F	±0.15% of instrument range ±1 digit
	N	-200.0 to 1300.0°C	-300.0 to 2400.0°F	±0.1% of instrument range ±1 digit for less than 0°C
	E	-270.0 to 1000.0°C	-450.0 to 1800.0°F	±0.1% of instrument range ±1 digit for 0°C or more
RTD	L	-200.0 to 900.0°C	-300.0 to 1600.0°F	±0.2% of instrument range ±1 digit for less than 0°C
	U	-200.0 to 400.0°C	-300.0 to 750.0°F	±1.5% of instrument range ±1 digit for less than -200.0°C of thermocouple E.
	W	0.0 to 2300.0°C	32 to 4200°F	±0.2% of instrument range ±1 digit (Note 2)
	Platinel 2	0.0 to 1390.0°C	32.0 to 2500.0°F	±0.1% of instrument range ±1 digit
	PR20-40	0.0 to 1900.0°C	32 to 3400°F	±0.5% of instrument range ±1 digit for 800°C or more
	W97Re3-W75Re25	0.0 to 2000.0°C	32 to 3600°F	Accuracy is not guaranteed for less than 800°C.
	JPt100	-200.0 to 500.0°C	-300.0 to 1000.0°F	±0.2% of instrument range ±1 digit (Note 1)
		-150.00 to 150.00°C	-200.0 to 300.0°F	±0.1% of instrument range ±1 digit
		-200.0 to 850.0°C	-300.0 to 1560.0°F	±0.1% of instrument range ±1 digit (Note 1)
		-200.0 to 500.0°C	-300.0 to 1000.0°F	±0.1% of instrument range ±1 digit
Standard signal	Pt100	-150.00 to 150.00°C	-200.0 to 300.0°F	±0.1% of instrument range ±1 digit
		0.400 to 2.000 V		
		1.000 to 5.000 V		
		4.00 to 20.00 mA		
	DC voltage/current	0.000 to 2.000 V		
		0.00 to 10.00 V		
		0.00 to 20.00 mA		
		-10.00 to 20.00 mV		
		0.0 to 100.0 mV		
				±0.1% of instrument range ±1 digit

The accuracy is that in the standard operating conditions: 23±2°C, 55±10%RH, and power frequency at 50/60 Hz.

Note 1: ±0.3°C ±1 digit in the range between 0 and 100°C, ±0.5°C ±1 digit in the range between -100 and 200°C.

Note 2: W: W-5% Re/W-26% Re(Hoskins Mfg.Co.). ASTM E988

- Input sampling (control) period: 200 ms
- Burnout detection:
  - Functions at TC, RTD, and standard signal.
  - Upscale, downscale, and off can be specified.
  - For standard signal, burnout is determined to have occurred if it is 0.1 V or 0.4 mA or less.
- Input bias current: 0.05 µA (for TC or RTD)
- Measured current (RTD): About 0.16 mA
- Input resistance:
  - TC or mV input: 1 MΩ or more
  - V input: About 1 MΩ
  - mA input: About 250 Ω

- Allowable signal source resistance:
  - TC or mV input: 250 Ω or less
  - Effects of signal source resistance: 0.1 µV/Ω or less
  - DC voltage input: 2 kΩ or less
  - Effects of signal source resistance: About 0.01%/100 Ω
- Allowable wiring resistance:
  - RTD input: Max. 150 Ω/wire (The conductor resistance between the three wires shall be equal.)
  - Wiring resistance effect: ±0.1°C/10 Ω
  - V input: ±20 V DC
  - mA input: ±40 mA
- Noise rejection ratio:
  - Normal mode: 40 dB or more (at 50/60 Hz)
  - Common mode: 120 dB or more (at 50/60 Hz)
  - For 100-240 V AC, the power frequency can be set manually. Automatic detection is also available.
  - For 24 V AC/DC, the power frequency can be set manually.
- Reference junction compensation error:
  - ±1.0°C (15 to 35°C), ±1.5°C (-10 to 15°C and 35 to 50°C)
- Applicable standards: JIS/IEC/DIN (ITS-90) for TC and RTD

■ Analog Output Specifications (Suffix code: -C)

- Number of outputs:
  - Control output: 1
- Output type: Current output
- Current output: 4 to 20 mA DC or 0 to 20 mA DC/load resistance of 600 Ω or less
- Current output accuracy: ±0.1% of span (±5% of span for 1 mA or less)
  - The accuracy is that in the standard operating conditions: 23±2°C, 55±10%RH, and power frequency at 50/60 Hz.

■ Analog Output Specifications (Suffix code: -V)

- Number of outputs:
  - Control output: 1
- Output type: Voltage pulse output
- Voltage pulse output:
  - Use: Time proportional output
  - On-voltage: 12 V or more/load resistance of 600 Ω or more
  - Off-voltage: 0.1 V DC or less
  - Time resolution: 10 ms or 0.1% of output, whichever is larger

■ Relay Contact Output Specifications (Suffix code: R)

- Contact type and number of outputs:
    - Control output: contact point 1c; 1 point
  - Contact rating:
    - Contact point 1c (control output): 250 V AC, 3 A or 30 V DC, 3A (resistance load)
  - Use: Time proportional output, ON/OFF output
  - Time resolution of control output: 10 ms or 0.1% of output, whichever is larger
- Note: The control output should always be used with a load of 10 mA or more.

■ Relay Contact Output Specifications

- Contact type and number of outputs:
    - Alarm output: contact point 1a; 2 points (common is independent)
  - Contact rating:
    - Contact point 1a (alarm output): 240 V AC, 1A or 30 V DC, 1 A (resistance load)
  - Use: Alarm output, FAIL output, etc.
- Note: The alarm output should always be used with a load of 1 mA or more.

■ 24 V DC Loop Power Supply Specifications

- Use: Power is supplied to a 2-wire transmitter.
- Power supply: 21.6 to 28.0 V DC
- Rated current: 4 to 20 mA DC
- Maximum supply current: About 30 mA (with short-circuit current limiting circuit.)

■ Safety and EMC Standards

- Safety:
  - Compliant with IEC/EN61010-1 (CE), IEC/EN61010-2-030 (CE), approved by CAN/CSA C22.2 No. 61010-1 (CSA), approved by UL61010-1.
  - Installation category: II
  - Pollution degree: 2
  - Measurement category: I (CAT I) (UL, CSA)
  - O (Other) (CE)
  - Rated measurement input voltage: Max. 10 V DC
  - Rated transient overvoltage: 1500 V (\*)
  - \* This is a reference safety standard value for measurement category I of IEC/EN/CSA/UL61010-1. This value is not necessarily a guarantee of instrument performance.
- EMC standards:
  - Compliant with CE marking
  - EN 61326-1 Class A, Table 2 (For use in industrial locations),
  - EN 61326-2-3
  - \* The instrument continues to operate at a measurement accuracy of within ±20% of the range during testing.
  - EN 55011 Class A, Group 1
  - EN 61000-3-2 Class A
  - EN 61000-3-3
  - EMC Regulatory Arrangement in Australia and New Zealand (for all model including LL50A)

- EN 55011 Class A, Group 1
- KC marking:
  - Electromagnetic wave interference prevention standard, electromagnetic wave protection standard compliance

■ Construction, Installation, and Wiring

- Dust-proof and drip-proof: IP66 (for front panel) (Not available for side-by-side close mounting.)
- Material: Polycarbonate (Flame retardancy: UL94V-0)
- Case color: White (Light gray) or Black (Light charcoal gray)
- Weight: 0.5 kg or less
- External dimensions (mm): 48 (W) × 96 (H) × 65 (depth from the panel face) (Depth except the projection on the rear panel)
- Installation: Direct panel mounting; mounting bracket, one each for upper and lower mounting
- Panel cutout dimensions (mm): 45<sup>+0.6/0</sup> (W) × 92<sup>+0.8/0</sup> (H)
- Mounting attitude: Up to 30 degrees above the horizontal. No downward tilting allowed.
- Wiring: M3 screw terminal with square washer (for signal wiring and power wiring)

■ Power Supply Specifications and Isolation

- Power supply:
  - Rated voltage: 100-240 V AC (+10%/-15%), 50/60 Hz
  - 24 V AC/DC (+10%/-15%) (for /DC option)
- Power consumption: 15 VA (DC:7 VA, AC: 11 VA if /DC option is specified)
- Data backup: Nonvolatile memory
- Power holdup time: 20 ms (for 100 V AC drive)
- Withstanding voltage
  - Between primary terminals and secondary terminals: 2300 V AC for 1 minute (UL, CSA)
  - Between primary terminals and secondary terminals: 3000 V AC for 1 minute (CE)
  - Between primary terminals: 1500 V AC for 1 minute
  - Between secondary terminals: 500 V AC for 1 minute
  - (Primary terminals: Power\* and relay output terminals; Secondary terminals: Analog I/O signal terminals, communication terminals and functional grounding terminals.)
  - \*: Power terminals for 24V AC/DC models are the secondary terminals.
- Insulation resistance: Between power supply terminals and a grounding terminal 20 MΩ or more at 500 V DC
- Isolation specifications

PV (universal) input terminal		Internal circuits	Power supply
Control (voltage pluse, analog) output terminal			
Control relay (c-contact) output terminal			
Alarm-1 relay (a-contact) output terminal			
Alarm-2 relay (a-contact) output terminal			
RS485 communication terminal			
24 V DC loop power supply terminal			

The circuits divided by lines are insulated mutually.

■ Environmental Conditions

Normal Operating Conditions:

- Ambient temperature: -10 to 50°C (-10 to 40°C for side-by-side mounting of controllers)
- Ambient humidity: 20 to 90% RH (no condensation allowed)
- Magnetic field: 400 A/m or less
- Continuous vibration at 5 to 9 Hz: Half amplitude of 1.5 mm or less, 10ct/min for 90 minutes each in the three axis directions
- Continuous vibration at 9 to 150 Hz: 4.9 m/s<sup>2</sup> or less, 10ct/min for 90 minutes each in the three axis directions
- Short-period vibration: 14.7 m/s<sup>2</sup>, 15 seconds or less
- Shock: 98 m/s<sup>2</sup> or less, 11 ms
- Altitude: 2000 m or less above sea level
- Warm-up time: 30 minutes or more after the power is turned on
- Startup time: Within 10 seconds
- \*: The LCD (a liquid crystal display) is used for a display portion of this product. The LCD has a characteristic that the display action becomes late at the low temperature. However, the control function is not affected.

Transportation and Storage Conditions:

- Temperature: -25 to 70°C
- Temperature change rate: 20°C/h or less
- Humidity: 5 to 95% RH (no condensation allowed)

Effects of Operating Conditions


- Effect of ambient temperature:
  - Voltage or TC input: ±1 µV/°C or ±0.01% of F.S./°C, whichever is larger
  - Current input: ±0.01% of F.S./°C
  - RTD input: ±0.05°C/°C (ambient temperature) or less
  - Analog output: ±0.02% of F.S./°C or less
- Effect of power supply voltage fluctuation
  - Analog input: ±0.05% of F.S. or less
  - Analog output: ±0.05% of F.S. or less
  - (Each within rated voltage range)



5. How to Connect Wires



- Wiring work must be carried out by a person with basic electrical knowledge and practical experience.
- Be sure to turn OFF the power supply to the controller before wiring to avoid an electric shock. Use a tester or similar device to ensure that no power is being supplied to a cable to be connected.
- As a safety measure, always install a circuit breaker (an IEC 60947-compatible product, 5 A, 100 V or 220 V AC) in an easily accessible location near the instrument. Moreover, provide indication that the switch is a device for turning off the power to the instrument.
- Install the power cable keeping a distance of more than 1 cm from other signal wires.
- The power cable is required to meet the IEC standards concerned or the requirements of the area in which the instrument is being installed.
- Wiring should be installed to conform to NEC (National Electrical Code: ANSI/NFPA-70) or the wiring construction standards in countries or regions where wiring will be installed.
- For control relay output, alarm relay output, and power terminal connections, use heat-resistant cables.
- Since the insulation provided to each relay output terminal is Functional insulation, provide Reinforced insulation to the external of the device as necessary. (Refer to the drawing below.)

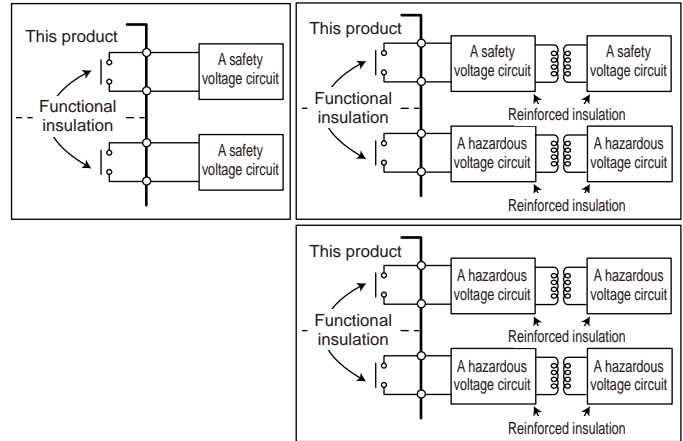


- When connecting two or more crimp-on terminal lugs to the single terminal block, bend the crimp-on terminal lugs before tightening the screw.
- Note that the wiring of two or more crimp-on terminal lugs to the single high-voltage terminal of the power supply and relay, etc. does not comply with the safety standard.



- Provide electricity from a single-phase power supply. If the power is noisy, install an isolation transformer on the primary side, and use a line filter on the secondary side. When measures against noise are taken, do not install the primary and secondary power cables close to each other.
- If there is a risk of external lightning surges, use a lightning arrester etc.
- For TC input, use shielded compensating lead wires for wiring. For RTD input, use shielded wires that have low conductor resistance and cause no significant differences in resistance between the three wires.
- Since the control output relay has a life span (resistance load of 100,000 times), use the auxiliary relay to perform ON/OFF control.
- The use of inductance (L) loads such as auxiliary relays, motors and solenoid valves causes malfunction or relay failure; always insert a CR filter for use with alternating current or a diode for use with direct current, as a spark-removal surge suppression circuit, into the line in parallel with the load.
- After completing the wiring, the terminal cover is recommended to use for the instrument.

Recommended Crimp-on Terminal Lugs

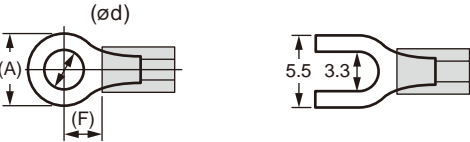

Recommended tightening torque: 0.6 N·m  
Applicable wire size: Power supply wiring 1.25 mm<sup>2</sup> or more


Applicable terminal lug	Applicable wire size mm <sup>2</sup> (AWG#)	(ø d)	(A)	(F)
M3	0.25 to 1.65 (22 to 16)	3.3	5.5	4.2

Cable Specifications and Recommended Cables


Purpose	Name and Manufacturer
Power supply, relay contact outputs	600 V Grade heat-resistant PVC insulated wires, JIS C 3317(HIV), 0.9 to 2.0 mm <sup>2</sup>
Thermocouple	Shielded compensating lead wires, JIS C 1610 For thermocouple input (PV input and remote input with direct input), shielded compensating lead wire of cross-sectional area less than or equal to 0.75 mm <sup>2</sup> is recommended. If the cross-sectional area is wide, the reference junction compensation error may be large.
RTD	Shielded wires (three/four conductors), UL2482 (Hitachi Cable)
Other signals (other than contact output)	Shielded wires
Other signals (contact output)	Unshielded wires
RS-485 communication	Shielded wires

Recommended tightening torque: 0.5 to 0.6 N·m

DC Relay Wiring

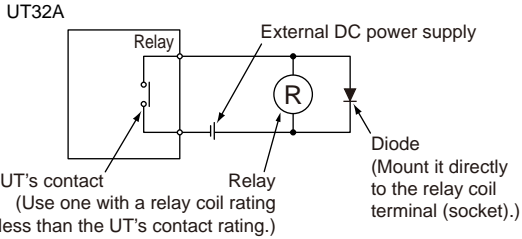

AC Relay Wiring

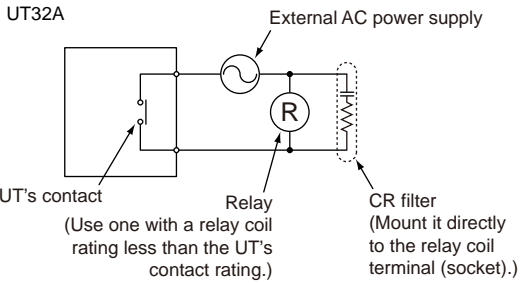


6. Terminal Wiring Diagrams



- Do not use an unassigned terminal as the relay terminal.
- Do not use a 100-240 V AC power supply for the 24 V AC/DC model; otherwise, the instrument will malfunction.

■ UT32A

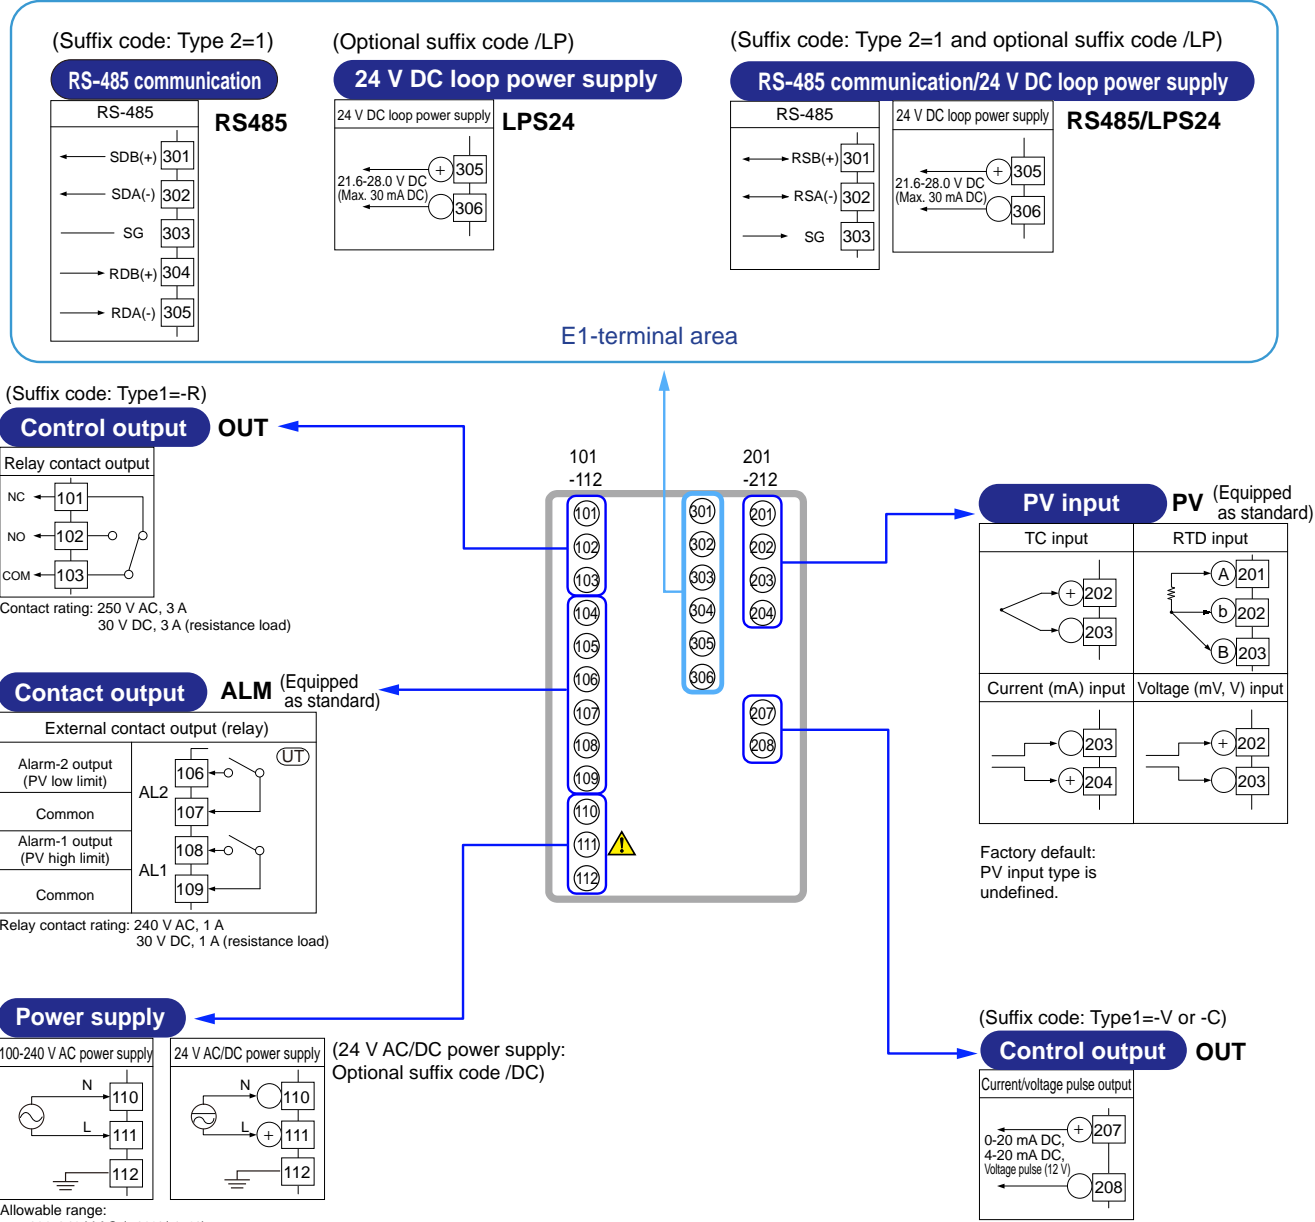

Intentionally blank

Intentionally blank


This operation guide describes basic settings and operations of the UT32A. For details of each function, see the electronic manual. The scrolling guide is displayed on PV display in the Parameter Setting Display. This guide can be turned on/off with the Fn key. For details of the each function, refer to the electronic manual. User's manuals can be downloaded or viewed at the following URL.

<http://www.yokogawa.com/ns/ut/im/>

Contents


- 1. Names and Functions of Display Parts
- 2. Setup Procedure
- 3. Quick Setting Function (Setting of Input and Output)
- 4. Setting Alarm Type
- 5. Setting Alarm Setpoint

1. Names and Functions of Display Parts

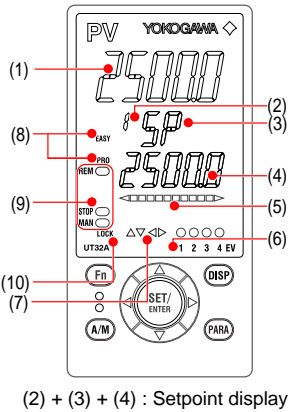

(2) + (3) + (4) : Setpoint display

No. in figure	Name	Description												
(1)	PV display (white or red)	Displays PV. Displays an error code if an error occurs. Displays the scrolling guide in the Menu Display and Parameter Setting Display when the guide display ON/OFF is set to ON.												
(2)	Group display (green)	Displays a group number (1 to 4 or R) and terminal area (E1 to E4). 1 to 4 represent SP numbers in the Operation Display. R and E1 to E4 are displayed in the Parameter Setting Display.												
(3)	Symbol display (orange)	Displays a parameter symbol.												
(4)	Data display (orange)	Displays a parameter setpoint and menu symbol.												
(5)	Bar-graph display (orange)	Displays control output value (OUT) and measured input value (PV). The data to be displayed can be set by the parameter. Initial value: Deviation, Heating-side control output (in Heating/cooling control)												
(6)	Event indicator (orange)	Lit when the alarms 1 to 4 occur. Event displays other than alarms can be set by the parameter.												
(7)	Key navigation indicator (green)	Lit or blinks when the Up/Down or Left/Right arrow key operation is possible.												
(8)	Parameter display level indicator (green)	Displays the setting conditions of the parameter display level function.												
		<table><tr><th>Parameter display level</th><th>EASY</th><th>PRO</th></tr><tr><td>Easy setting mode</td><td>Lit</td><td>Unlit</td></tr><tr><td>Standard setting mode</td><td>Unlit</td><td>Unlit</td></tr><tr><td>Professional setting mode</td><td>Unlit</td><td>Lit</td></tr></table>	Parameter display level	EASY	PRO	Easy setting mode	Lit	Unlit	Standard setting mode	Unlit	Unlit	Professional setting mode	Unlit	Lit
		Parameter display level	EASY	PRO										
		Easy setting mode	Lit	Unlit										
Standard setting mode	Unlit	Unlit												
Professional setting mode	Unlit	Lit												
(9)	Status indicator (green and red)	Displays the operating conditions and control status.												
		<table><tr><th>Indicator</th><th>Description</th></tr><tr><td>REM</td><td>Lit when in remote mode (REM).</td></tr><tr><td>STOP</td><td>Lit when in stop mode (STOP).</td></tr><tr><td>MAN</td><td>Lit when in manual mode (MAN). Blinks during auto-tuning.</td></tr></table>	Indicator	Description	REM	Lit when in remote mode (REM).	STOP	Lit when in stop mode (STOP).	MAN	Lit when in manual mode (MAN). Blinks during auto-tuning.				
Indicator	Description													
REM	Lit when in remote mode (REM).													
STOP	Lit when in stop mode (STOP).													
MAN	Lit when in manual mode (MAN). Blinks during auto-tuning.													
(10)	Security indicator (red)	Lit if a password is set. The setup parameter settings are locked.												

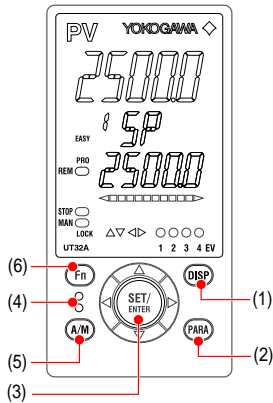


No. in figure	Name	Description
(1)	DISP key	Used to switch the Operation Displays. Press the key in the Operation Display to switch the provided Operation Displays. Press the key in the Menu Display or Parameter Setting Display to return to the Operation Display.
(2)	PARA key	Hold down the key for 3 seconds to move to the Operation Parameter Setting Display. Hold down the key and the Left arrow key simultaneously for 3 seconds to move to the Setup Parameter Setting Display. Press the key in the Parameter Setting Display to return to the Menu Display. Press the key once to cancel the parameter setting (setpoint is blinking).
(3)	SET/ENTER key Up/Down/Left/Right arrow keys	SET/ENTER key Press the key in the Menu Display to move to the Parameter Setting Display of the Menu. Press the key in the Parameter Setting Display to transfer to the parameter setting mode (setpoint is blinking), and the parameter can be changed. Press the key during parameter setting mode to register the setpoint. Up/Down/Left/Right arrow keys Press the Left/Right arrow keys in the Menu Display to switch the Displays. Press the Up/Down/Left/Right arrow keys in the Parameter Setting Display to switch the Displays. Press the Up/Down arrow keys during parameter setting mode (setpoint is blinking) to change a setpoint. Press the Left/Right arrow keys during parameter setting mode (setpoint is blinking) to move between digits according to the parameter.
(4)	Light-loader interface	It is the communication interface for the adapter cable used when setting and storing parameters from a PC. The LL50A Parameter Setting Software (sold separately) is required.
(5)	A/M key	Used to switch between AUTO and MAN modes. The setting is switched between AUTO and MAN each time the key is pressed.
(6)	User function keys	The UT32A has only the Fn key. The user can assign a function to the key. The function is set by the parameter.

Note: The communication connector (maintenance port) for LL50A Parameter Setting Software is on the top of the unit.

2. Setup Procedure

The following flowchart shows the setup procedure for UT32A.

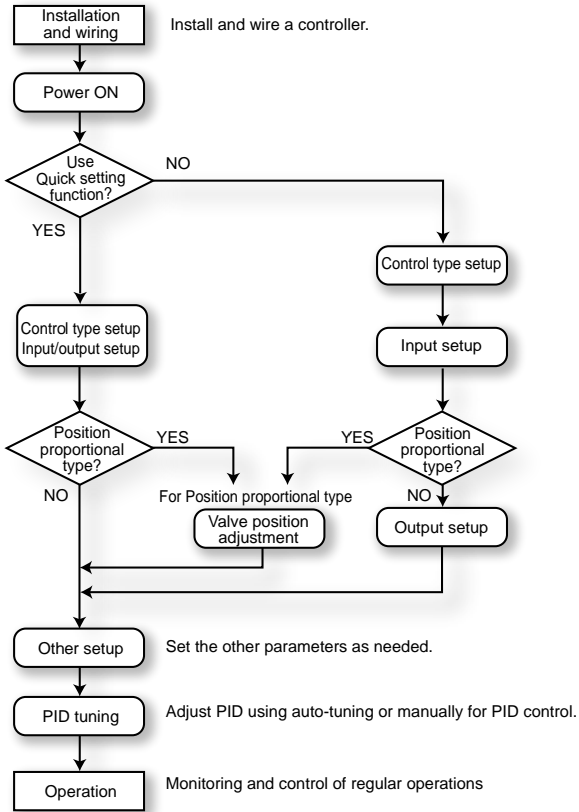


3. Quick Setting Function (Setting of Input and Output)

The Quick setting function is a function to easily set the basic function of the controller. Turn on the controller to start the Quick setting function. This function allows you to easily set the control type and input, and quickly start the control action. For time proportional output, you can set the cycle time. The items (parameters) to be set by Quick setting function are as follows.  
(1) Control type (PID control, ON/OFF control)  
(2) Input function (PV input type, range, scale (at voltage input), etc.)  
(3) Output function (cycle time)

After turning on the controller, first decide whether or not to use the Quick setting function.  
**Operation in Initial Display**  
· Press the SET/ENTER key while YES is displayed to start the Quick setting function.  
· If you change YES to NO and press the SET/ENTER key, Operation Display will appear without starting the Quick setting function.

Flow of Quick Setting Function

In Quick setting mode, the parameter guide appears on PV display. This guide can be turned on/off with the Fn key.

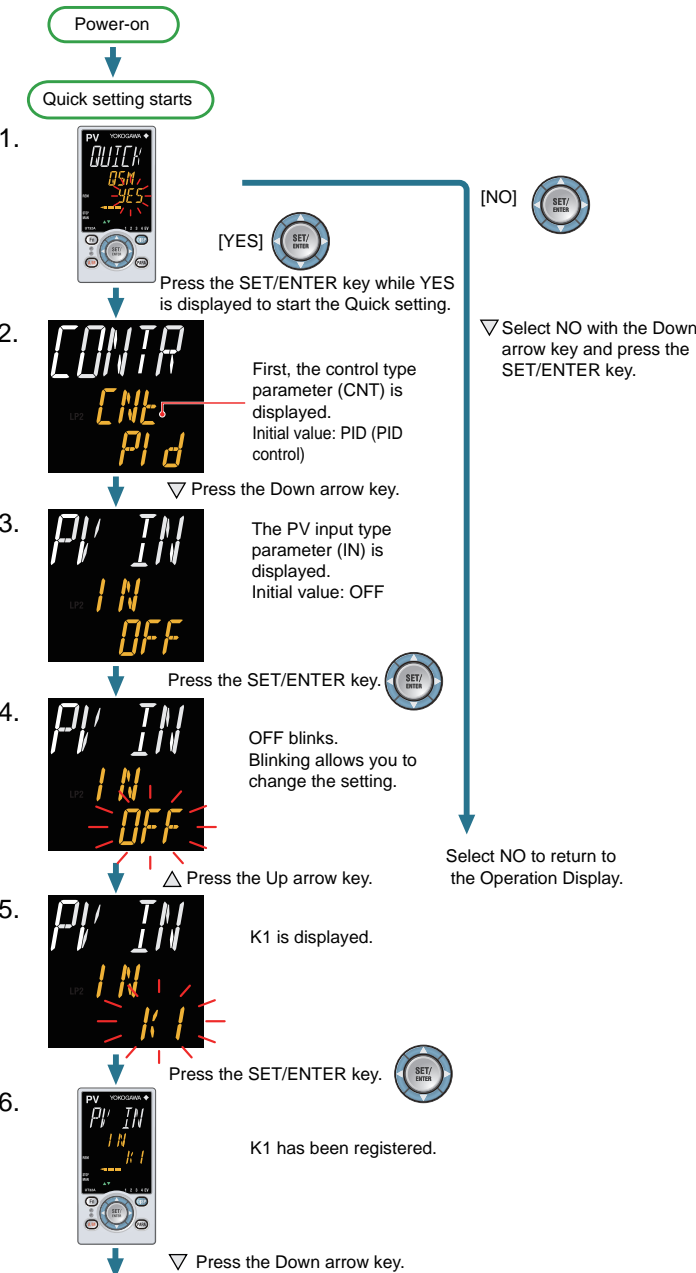


Operation for Setting

- To select the parameter setting displayed as the initial value, press the Down arrow key to move to the next parameter.
- To change and set the parameter setting, press the SET/ENTER key to start the setpoint blinking. The blinking state allows you to make changes (setting mode). Use the Up/Down/Left/Right arrow keys to change the setpoint. Press the SET/ENTER key to register the setting.

Making Settings Using Quick Setting Function

**Example: Setting to PID control and thermocouple type K (range of 0.0 to 500.0°C)**  
For the detailed procedure and switching of displays, see "Flow of Quick Setting Function" below. For the parameters to set, see the next page.

- (1) Press the SET/ENTER key while YES for QSM (Quick setting mode) is displayed.
- (2) Set the control type parameter (CNT) to PID (PID control).
- (3) Set the PV input type parameter (IN) to K1 (-270.0 to 1370.0 °C).
- (4) Set the PV input unit parameter (UNIT) to C (Degree Celsius).
- (5) Set the maximum value of PV input range parameter (RH) to 500.0.
- (6) Set the minimum value of PV input range parameter (RL) to 0.0.
- (7) Finally, EXIT is displayed. Change NO to YES and press the SET/ENTER key to complete the setup. Operation Display appears.

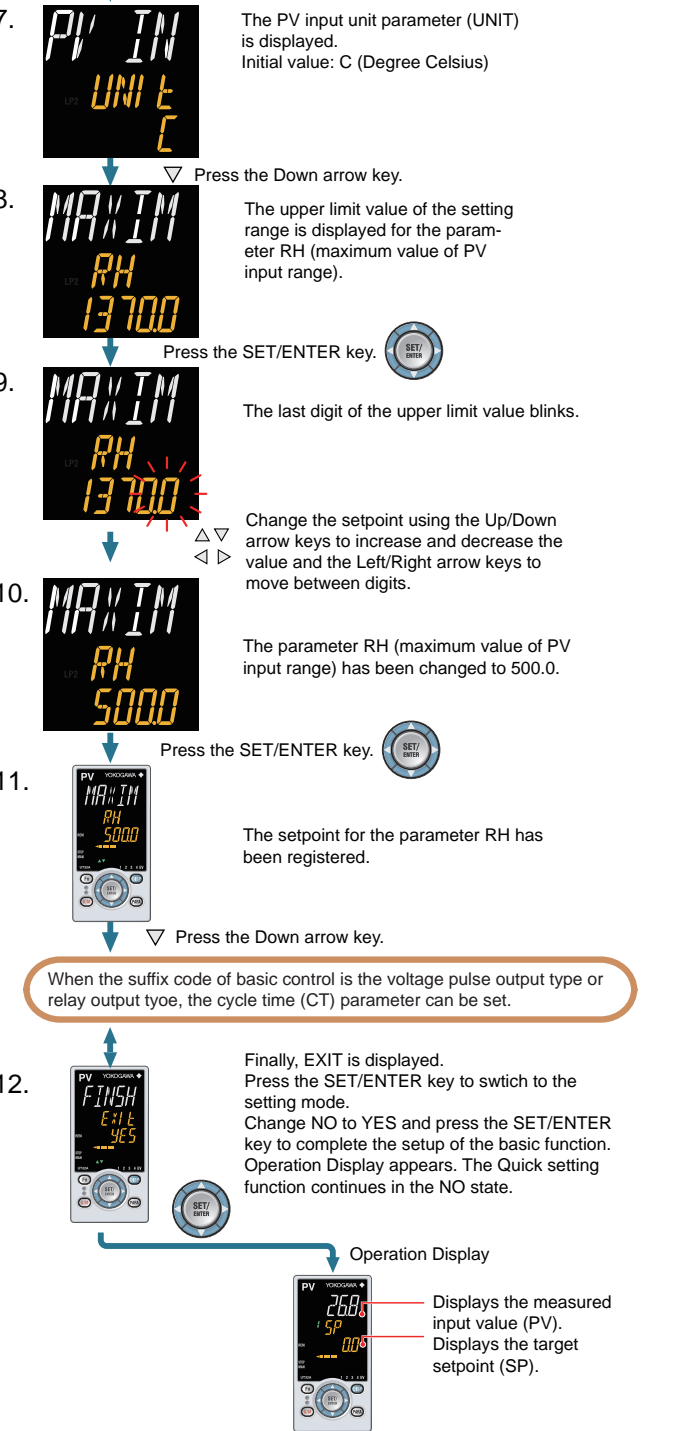



■ Parameters to be set

Control Type

Parameter Symbol	Name of Parameter	Setting Range
CNT	Control type	PID: PID control ONOF: ON/OFF control (1 point of hysteresis) ONOF2: ON/OFF control (2 points of hysteresis)

Note: Some setpoints may not be displayed depending on the model and suffix codes.

Input Function

Parameter Symbol	Name of Parameter	Setting Range
IN	PV input type	OFF: Disable K1: -270.0 to 1370.0 °C / -450.0 to 2500.0 °F K2: -270.0 to 1000.0 °C / -450.0 to 2300.0 °F K3: -200.0 to 500.0 °C / -200.0 to 1000.0 °F J: -200.0 to 1200.0 °C / -300.0 to 2300.0 °F T1: -270.0 to 400.0 °C / -450.0 to 750.0 °F T2: 0.0 to 400.0 °C / -200.0 to 750.0 °F B: 0.0 to 1800.0 °C / 32 to 3300 °F S: 0.0 to 1700.0 °C / 32 to 3100 °F R: 0.0 to 1700.0 °C / 32 to 3100 °F N: -200.0 to 1300.0 °C / -300.0 to 2400.0 °F E: -270.0 to 1000.0 °C / -450.0 to 1800.0 °F L: -200.0 to 900.0 °C / -300.0 to 1600.0 °F U1: -200.0 to 400.0 °C / -300.0 to 750.0 °F U2: 0.0 to 400.0 °C / -200.0 to 1000.0 °F W: 0.0 to 2300.0 °C / 32 to 4200 °F PL2: 0.0 to 1390.0 °C / 32 to 2500.0 °F P2040: 0.0 to 1900.0 °C / 32 to 3400 °F WRE: 0.0 to 2000.0 °C / 32 to 3600 °F JPT1: -200.0 to 500.0 °C / -300.0 to 1000.0 °F JPT2: -150.00 to 150.00 °C / -200.0 to 300.0 °F PT1: -200.0 to 850.0 °C / -300.0 to 1560.0 °F PT2: -200.0 to 500.0 °C / -300.0 to 1000.0 °F PT3: -150.00 to 150.00 °C / -200.0 to 300.0 °F 0.4-2V: 0.400 to 2.000 V 1-5V: 1.000 to 5.000 V 4-20: 4.00 to 20.00 mA 0-2V: 0.000 to 2.000 V 0-10V: 0.00 to 10.00 V 0-20: 0.00 to 20.00 mA -1020: -10.00 to 20.00 mV 0-100: 0.0 to 100.0 mV
UNIT	PV input unit	-: No unit, C: Degree Celsius -: No unit, -: No unit, - -: No unit, F: Degree Fahrenheit
RH	Maximum value of PV input range	Depends on the input type. - For temperature input - Set the temperature range that is actually controlled. (RL<RH) - For voltage / current input - Set the range of a voltage / current signal that is applied. The scale across which the voltage / current signal is actually controlled should be set using the maximum value of input scale (SH) and minimum value of input scale (SL). (Input is always 0% when RL = RH.)
RL	Minimum value of PV input range	
SDP	PV input scale decimal point position	0: No decimal place      3: Three decimal places 1: One decimal place    4: Four decimal places 2: Two decimal places
SH	Maximum value of PV input scale	
SL	Minimum value of PV input scale	-19999 to 30000, (SL<SH),   SH - SL   ≤ 30000

Note 1: SDP, SH, and SL are displayed only for voltage/current input.  
Note 2: W: W-5%Re/W-26%Re (Hoskins Mfg.Co.), ASTM E988

Output Function

Parameter Symbol	Name of Parameter	Setting Range
CT	Control output cycle time	0.5 to 1000.0 s

4. Setting Alarm Type

The following operating procedure shows an example of changing the alarm-1 type (factory default: PV high limit alarm) to PV low limit alarm (setpoint: 02).


1. Show the Operation Display.
2. Hold down the key for 3 seconds. MODE menu is displayed.
3. Press the Right arrow key until ALRM menu appears. ALRM menu is displayed.
4. Press the SET/ENTER key. The parameter AL1 (alarm-1 type) is displayed.
5. Press the SET/ENTER key. The last digit of the setpoint blinks.
6. Change the setpoint using the Up/Down arrow keys to increase and decrease the value and the Left/Right arrow keys to move between digits.

- To change the alarm type, change the last 2 digits of the 5-digit value.
- Stand-by action and excitation are turned on or off by selecting 1 or 0. (See "Setting Display of Alarm Type.")
- For the latch action, see User's Manual.


Alarm Type (Alarm Setpoint)	Alarm Action (Energized)	Alarm Action (De-energized)
No alarm (00)	-	-
PV high limit (01) Analog input PV high limit (19)	Hysteresis Open (unit) Closed (lit) PV Alarm setpoint	Hysteresis Closed (unit) Open (lit) PV Alarm setpoint
PV low limit (02) Analog input PV low limit (20)	Hysteresis Closed (lit) Open (unit) Alarm setpoint PV	Hysteresis Open (unit) Closed (unit) Alarm setpoint PV
SP high limit (03) Target SP high limit (09)	Hysteresis Open (unit) Closed (lit) SP or Target SP Alarm setpoint	Hysteresis Closed (unit) Open (lit) SP or Target SP Alarm setpoint
SP low limit (04) Target SP low limit (10)	Hysteresis Closed (lit) Open (unit) Alarm setpoint SP or Target SP	Hysteresis Open (unit) Closed (unit) Alarm setpoint SP or Target SP
Deviation high limit (05) Target SP deviation high limit (11)	Hysteresis Open (unit) Closed (lit) PV Deviation setpoint SP or Target SP ⊕	Hysteresis Closed (unit) Open (lit) PV Deviation setpoint SP or Target SP ⊕
Deviation low limit (06) Target SP deviation low limit (12)	Hysteresis Closed (lit) Open (unit) Deviation setpoint PV ⊖ SP or Target SP	Hysteresis Open (unit) Closed (unit) Deviation setpoint PV ⊖ SP or Target SP
Deviation high and low limits (07) Target SP deviation high and low limits (13)	Hysteresis Hysteresis Closed (lit) Open (unit) Closed (lit) Deviation setpoint PV SP or Target SP	Hysteresis Hysteresis Open (unit) Closed (unit) Open (lit) Deviation setpoint PV SP or Target SP
Deviation within high and low limits (08) Target SP deviation within high and low limits (14)	Hysteresis Hysteresis Open (unit) Closed (lit) Open (unit) Deviation setpoint PV SP or Target SP	Hysteresis Hysteresis Closed (unit) Open (lit) Closed (unit) Deviation setpoint PV SP or Target SP
Control output high limit (15)	Hysteresis Open (unit) Closed (lit) Output Alarm setpoint	Hysteresis Closed (unit) Open (lit) Output Alarm setpoint
Control output low limit (16)	Hysteresis Closed (lit) Open (unit) Alarm setpoint Output	Hysteresis Open (unit) Closed (unit) Alarm setpoint Output
Feedback input high limit (27)	Fault diagnosis alarm (30) Burnout of PV input, ADC failure, RJC error.	
Feedback input low limit (28)	FAIL (31) For the factory default, the contact output is turned ON in normal operation, OFF at the time of FAIL. Control output: OFF or 0%, Alarm output: OFF	
PV velocity (29)		

Note 1: "Open/closed" shows status of relay contact, and "lit/unit" shows status of EV (event) lamp.  
Note 2: ⊕ Positive setpoint, ⊖ Negative setpoint

Setting Display of Alarm Type

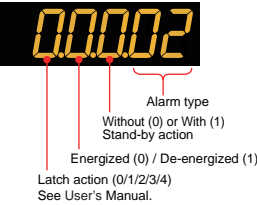

Stand-by Action

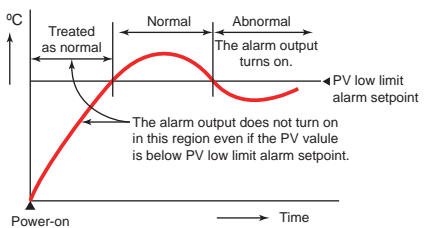

5. Setting Alarm Setpoint

The following operating procedure shows an example of setting the alarm-1 setpoint of group 1 to 180.0.

Before setting the alarm setpoint, check the alarm type. To change the alarm type, see "5. Setting Alarm Type."

1. Show the Operation Display.
2. Display MODE menu with the same procedure as described in Setting Alarm Type.
3. Press the Right arrow key. SP menu is displayed.
4. Press the SET/ENTER key. Press the Down arrow key until A1 appears. The parameter A1 is displayed. A1 to A4 represent the alarm-1 to -4 setpoints.
5. Press the SET/ENTER key. Blinks during the change.
6. Change the setpoint using the Up/Down arrow keys to increase and decrease the value and the Left/Right arrow keys to move between digits. Press the SET/ENTER key. The setpoint has been registered. After the setup is completed, press the DISP key once to return to the Operation Display.

Initializing parameter values

Parameters that you have changed can be initialized to factory default values or user default values. For details, see "Parameter Initialization" in the User's Manual.

Changing the parameter display levels

This operation guide does not explain all the parameters. To display all the parameters, you need to change the parameter display level to professional setting mode. For details, see "Setting Security Functions" in the User's Manual.

This operation guide describes key entries for operating the UT32A. For operations using external contact inputs, see "DI" of "6. Terminal Wiring Diagrams" in "Installation and Wiring."  
If you cannot remember how to carry out an operation during setting, press the DISP key once. This brings you to the display (Operation Display) that appears at power-on. The scrolling guide is displayed on PV display in the Parameter Setting Display. This guide can be turned on/off with the Fn key.  
For details of the each function, refer to the electronic manual. User's manuals can be downloaded or viewed at the following URL.

<http://www.yokogawa.com/ns/ut/im/>


Contents

- Monitoring-purpose Operation Displays Available during Operation
- Setting Target Setpoint (SP)
- Performing/Canceling Auto-tuning
- Selecting Target Setpoint Numbers (SPNO.)
- Switching between AUTO and MAN
- Switching between RUN and STOP
- Switching between REM (Remote) and LCL (Local)
- Manipulating Control Output in Manual Mode
- Troubleshooting

1. Monitoring-purpose Operation Displays Available during Operation

■ Operation Display Switching Diagram

- SP Display**  
Displays the measured input value on PV display.  
Displays the target setpoint (SP) on Setpoint display (SP can be changed).
- OUT Display**  
Displays the measured input value on PV display.  
Displays the control output value (OUT) on Setpoint display (OUT can be changed in manual mode).  
Displays the valve's feedback input value (at 0 to 100% valve opening) in Position proportional control.

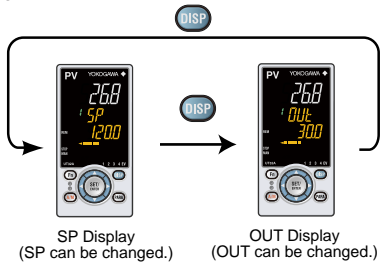

After showing the OUT Display, press the DISP key to show the following displays conditionally. For details, see User's Manual.

- SELECT Displays 1 to 5 (which appear when registered)
- Analog Input Display (display only) (factory default: non-display)
- PID Number Display (display only) (factory default: non-display)

2. Setting Target Setpoint (SP)



- Show the SP Display (Operation Display). (This is an example of setting the target setpoint to 150.0).
- Press the SET/ENTER key to start the last digit of the setpoint blinking. Blinking allows you to change the value.
- To set the setpoint, use the Left/Right arrow keys to move between digits and the Up/Down arrow keys to increase and decrease the value.
- When the required value is displayed, press the SET/ENTER key to register the setpoint.

3. Performing/Canceling Auto-tuning

Auto-tuning should be performed after setting a target setpoint. Make sure that the controller is in automatic mode (AUTO) and in run mode (RUN) before auto-tuning. For setting to AUTO, see "5. Switching between AUTO and MAN," and for setting to RUN, see "6. Switching between RUN and STOP."  
If the setpoint is known in advance or auto-tuning does not find any appropriate PID constants, set the PID manually. For setting the PID manually, see User's Manual.



- Do not perform auto-tuning for the following processes. Tune PID manually.**
- Processes with fast response such as flow rate control and pressure control.
  - Processes which do not allow the output to be turned on and off even temporarily.
  - Processes which prohibit severe output changes at control valves (or other actuators).
  - Processes in which product quality can be adversely affected if PV values fluctuate beyond their allowable ranges.

- Show the Operation Display.
- Hold down the PARA key for 3 seconds to display MODE menu.
- Press the SET/ENTER key.
- The parameter S.R (STOP/RUN switch) is displayed.
- Press the Down arrow key until the parameter AT appears.

- The parameter AT (auto-tuning switch) is displayed.
- Press the SET/ENTER key.
- OFF blinks.
- Press the Up/Down arrow keys to display the required setpoint.
- The setting range is 1 to 4 (represent group numbers) or R. To perform auto-tuning for the PID of group 1, set the parameter AT to 1. To quit the auto-tuning, set the parameter to OFF.
- Press the SET/ENTER key.
- The setpoint has been registered. This starts auto-tuning. The limiter can be set to the output during auto-tuning. For details, see User's Manual.
- The MAN lamp goes off, which means that the auto-tuning completed normally.

4. Selecting Target Setpoint Numbers (SPNO.)


The following operating procedure shows an example of changing the target setpoint number (SPNO.) from 1 to 2. Each SP has its PID group. The PID group set for the parameter PIDN (PID number selection) is used.

- Show the Operation Display.
- Hold down the PARA key for 3 seconds to display MODE menu.
- Press the SET/ENTER key.
- The parameter S.R (STOP/RUN switch) is displayed.
- Press the Down arrow key until the parameter SPNO. appears.
- The parameter SPNO. (SP number selection) is displayed.
- Press the SET/ENTER key.

- Change the setpoint using the Up/Down arrow keys. Blinks during the change.
- Press the SET/ENTER key.
- The setpoint has been registered. Press the DISP key once to return to the Operation Display.
- SPNO. has been changed to 2.

5. Switching between AUTO and MAN

AUTO and MAN switching can be performed using any of the following: (1) A/M key, (2) Communication, and (3) User function key. The figure below shows a direct operation using the A/M key.

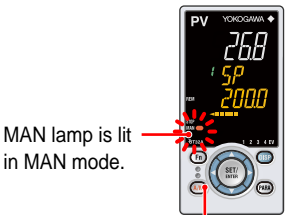

MAN lamp is lit in MAN mode.

Each time you press the A/M key, AUTO and MAN is switched alternately.

When AUTO is switched into MAN, the control output value in AUTO mode is held. The controller can be operated manually from the hold value. If the manual preset output is set (MPON parameter ≠ OFF), the controller can be operated manually from the arbitrary output value (MPO1 to MPO5 parameters).

6. Switching between RUN and STOP

RUN and STOP switching can be performed using any of the following: (1) Parameter, (2) Communication, and (3) User function key. For details of other switching methods and the display appearing when the operation is started, see User's Manual.

When the controller is stopped, input and outputs are as follows:

PV input	Displays the PV value.
Control output	Displays the preset output value. The preset output value is set for each PID group.
Alarm output	Turns the output on in case of an alarm.



7. Switching between REM (Remote) and LCL (Local)

Remote and local switching can be performed using any of the following: (1) Parameter, (2) Communication, and (3) User function key.

**LCL (Local)**

Control is performed using the target setpoint set on the controller.

**REM (Remote)**

Control is performed using a setpoint via communication for the target setpoint. The following shows an example of switching from local to remote using the parameter. (Only in cases where the communication is specified.)

For details of other switching methods, see User's Manual.

- The PID group for the local SP number is used as PID in remote mode.

NOTE

When the contact input is ON, operation cannot be performed using the parameter, communication, or key. When the contact input is OFF and the setting is switched using the parameter, communication, or key, the last switching operation is performed.

1. Show the Operation Display.

2. Hold down the PARA key for 3 seconds to display MODE menu.

3. Press the SET/ENTER key.

4. The parameter S.R (STOP/RUN switch) is displayed.

5. Press the Down arrow key until the parameter R.L appears.

6. Press the SET/ENTER key.

5. Change the operation mode using the Up/Down arrow keys. Blinks during the change.

6. The REM lamp is lit.

8. Manipulating Control Output in Manual Mode

NOTE

In manual mode, control output is manipulated by operating the keys (the value is changed using the Up/Down arrow keys, then outputted as it is). Even if the SET/ENTER key is not pressed, the control output value changes according to the displayed value.


In stop mode (when the STOP lamp is lit), control output cannot be manipulated.

Up arrow key: increases control output.  
Down arrow key: decreases control output.

9. Troubleshooting

■ Troubleshooting Flow

If the Operation Display does not appear after turning on the controller's power, check the procedures in the following flowchart. If a problem appears to be complicated, contact our sales representatives.

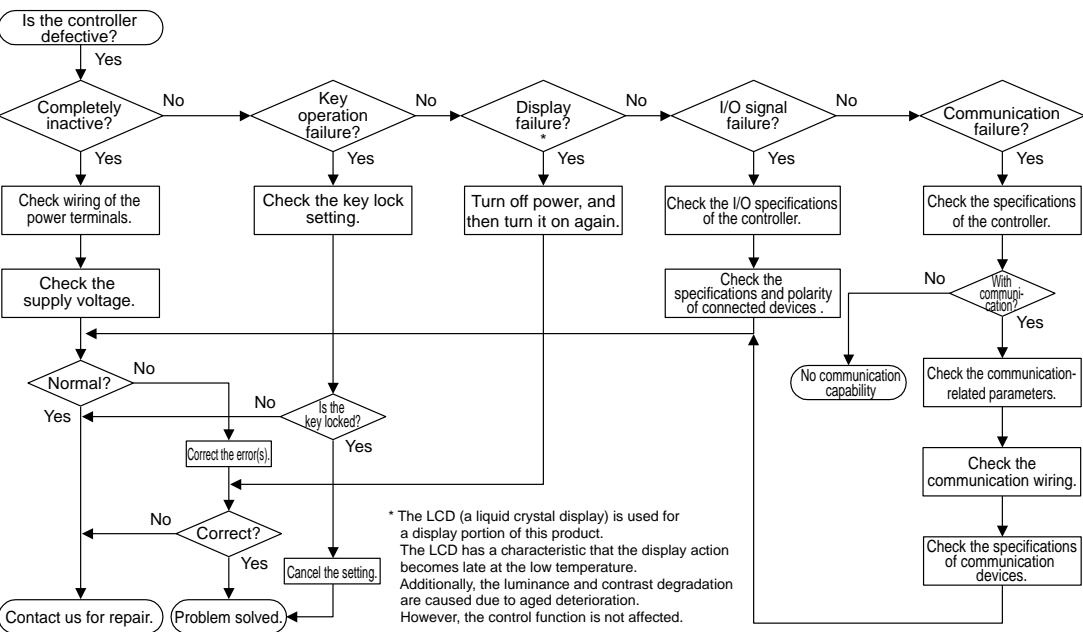

■ Remedies if Power Failure Occurs during Operations

- Instantaneous power failure within 20 ms. A power failure is not detected. Normal operation continues.
- Power failure for less than about 5 seconds, or for about 5 seconds or more. Affects the "settings" and "operation status." For details, see User's Manual.

NOTE

Write down the settings of parameters for a repair request.

■ Errors at Power On

The errors shown below may occur in the fault diagnosis when the power is turned on. (For details of Setpoint display and input/output action when each error occurs, see User's Manual.)

PV display (Operation Display)	Setpoint display (Operation Display)	Status indicator (Operation Display)	Parameter that displays error details	Error description	Cause and diagnosis	Remedy
Indication off	Indication off	—	—	Faulty MCU RAM / MCU ROM	MCU RAM / MCU ROM are failed.	Faulty. Contact us for repair.
ERR	SYS - - - -	—	—	System data error	System data is corrupted.	Faulty. Contact us for repair.
	PAR 0004 (for user default value error only)		Setup parameter (PA.ER)	User (parameter) default value error	User parameter is corrupted. Initialized to factory default value.	Check and reconfigure the initialized setting parameters. Error indication is erased when the power is turned on again.
	PAR 0010 (for setup parameter error only)			Setup parameter error	Setup parameter data is corrupted. Initialized to user default value.	
	PAR 0020 (for operation parameter error only)			Operation parameter error	Operation parameter data is corrupted. Initialized to user default value.	
	SLOT 0001 (0001: Error occurs to all hardware of E1-terminal areas.)		Setup parameter (OP.ER)	Nonresponding hardware of extended function (E1-terminal areas)	Inconsistence of system data and hardware of extended function. Nonresponding communication between hardware of extended function (E1-terminal areas).	Faulty. Contact us for repair.
Normal indication	Normal indication	Rightmost decimal point on PV display blinks.	Setup parameter (PA.ER)	Calibration value error	Initialized to calibrated default value because of corrupted factory default value.	Faulty. Contact us for repair.
		Rightmost decimal point on Symbol display blinks.		Faulty FRAM	Data writing (storing) to FRAM is impossible.	

■ Errors during Operation

The errors shown below may occur during operation. (For input/output action when each error occurs, see User's Manual.)

PV display (Operation Display)	Setpoint display (Operation Display)	Status indicator (Operation Display)	Parameter that displays error details	Error description	Cause and diagnosis	Remedy
AD.ERR	Normal indication (Note)	—	Setup parameter (AD1.E)	Analog input terminal ADC error +PV input	Analog input terminal AD value error	Faulty. Contact us for repair.
RJC.E (Displays RJC. E and PV alternately.)	Normal indication (Note)	—	Setup parameter (AD1.E)	Universal input terminal RJC error +PV input	Universal input terminal RJC error	Faulty. Contact us for repair. Set the parameter RJC to OFF to erase error indication.
B.OUT	Normal indication (Note)	—	Setup parameter (AD1.E)	Analog input terminal burnout error +PV input	Analog input terminal sensor burnout	Check wiring and sensor. Error indication is erased in normal operation.
			Setup parameter (PV1.E)	PV input burnout error	Burnout of analog input connected to PV	Check wiring and sensor of connected analog input terminals. Error indication is erased in normal operation.
OVER-OVER	Normal indication	—	Setup parameter (PV1.E)	PV input over-scale PV input under-scale (PV values out of -5 to 105%)	PV input is out of -5 to 105%. Also occurs when the data out of range which is the ladder calculation result is input.	Check analog input value or ladder program.
AT.E	Normal indication	—	Setup parameter (PV1.E)	Auto-tuning time-out	Auto-tuning does not end even when 24 hours have elapsed after the start of tuning.	Check the process. Hold down any key to erase the error indication
Normal indication	0.000 00000 (Decimal point on the left of the Symbol display blinks)	—	Setup parameter (OP.ER)	Communication error (RS-485 communication)	Framing parity error Buffer overflow Inter-character time-out Checksum error (PC link communication with checksum) CRC check error (Modbus/RTU) LRC check error (Modbus/ASCII)	Check the communication parameters. Recovery at normal receipt. Hold down any key to stop blinking.
Normal indication	0.000 00000 (Decimal point on the left of the Symbol display blinks)	—	Setup parameter (OP.ER)	Communication error (coordinated operation)	Inconsistence of loop between coordinated master and slaves	Check the communication parameters. Recovery at normal receipt. Change from remote to local mode to stop blinking.
					Communication from coordinated master is interrupted for 2 seconds.	When the mode is changed from remote to local, SP tracking does not work even if it is set to ON.
Normal indication	Normal indication	Rightmost decimal point on Symbol display blinks.	Setup parameter (PA.ER)	Faulty FRAM	Writing (storing) data to FRAM is impossible.	Faulty. Contact us for repair.
Undefined	Undefined	—	—	Faulty MCU / DCU (ROM / RAM error, corrupted)	MCU / DCU is corrupted.	Faulty. Contact us for repair.

Note: When an error occurs in input shown in Analog input display (Operation display), Setpoint display shows the same symbol as the PV display.




This operation guide describes the functions of parameters briefly. The parameter symbols listed are in the order shown on the display in each group of menu symbols. In addition, each parameter table has a "User Setting" column, where you can record your setpoints when setting them in the controller. The scrolling guide is displayed on PV display in the Parameter Setting Display. This guide can be turned on/off with the Fn key. For details of the each function, refer to the electronic manual. User's manuals can be downloaded or viewed at the following URL.

<http://www.yokogawa.com/ns/ut/im/>

## Operation Parameters

Hold down the PARA key for 3 seconds to move from the Operation Display to the Operation Parameter Setting Display. Press the DISP key once to return to the Operation Display.

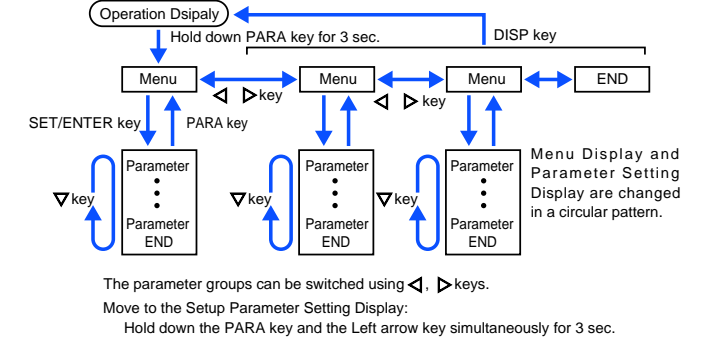

### Operation for Setting

- To select the parameter setting displayed as the initial value, press the Down arrow key to move to the next parameter.
- To change and set the parameter setting, press the SET/ENTER key to start the set-point blinking. The blinking state allows you to make changes (setting mode). Use the Up/Down/Left/Right arrow keys to change the setpoint. Press the SET/ENTER key to register the setting.

Note that there are some parameters which are not displayed depending on the model and suffix codes, control type (CNT), etc. The parameters for professional setting mode (LEVL: PRO) are not described in this manual. See User's Manual.

### Operation Mode

Menu symbol: *MODE* (MODE)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>SR</i> (S.R)	STOP/RUN switch	STOP: Stop mode RUN: Run mode Preset output (PO) is generated in STOP mode.	RUN		EASY
<i>RL</i> (R.L)	REMOTE/LOCAL switch	LCL: Local mode REM: Remote mode (Displayed only in cases where the communication is specified.)	LCL		
<i>AT</i> (AT)	AUTO-tuning switch	OFF: Disable 1 to 4: Perform auto-tuning. Tuning result is stored in the specified numbered PID. R: Tuning result is stored in the PID for reference deviation.	OFF		
<i>SPNO</i> (SPNO.)	SP number selection	1 to 4 (Depends on the setup parameter SPGR. setting.)	1		
<i>PI d</i> (PID)	PID number	The PID group number being selected is displayed. 1 to 4, R: PID group for reference deviation	1		

### SELECT Parameter

Menu symbol: *CS* (CS)

Parameter symbol	Name of Parameter			Setting Range				Initial value	User setting	Display level
Registered parameter symbol	SELECT parameter 10 to 19			Setting range of a registered parameter. For details, see User's Manual.				—	Table below	EASY
Parameter	n=10	n=11	n=12	n=13	n=14	n=15	n=16	n=17	n=18	n=19
CSn										

For the registration of SELECT parameters, see User's Manual.

### SP and Alarm Setpoint Setting Parameter

Menu symbol: *SP* (SP)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>SP</i> (SP)	Target setpoint	0.0 to 100.0% of PV input range (EU) (Setting range: SPL to SPH)	SPL		EASY
<i>SUB</i> (SUB)	Sub-target setpoint (in Two-position two-level control)	Set the offset from SP. -100.0 to 100.0% of PV input range span (EUS)	0.0 % of PV input range span		
<i>PI dN</i> (PIDN)	PID number selection	Set a PID group number to use. 1 to 4 (Depends on the setup parameter PIDG. setting.)	1 to 4	Table below	EASY
<i>AL</i> (A1 to A4)	Alarm-1 to -4 setpoint	Set a display value of setpoint of PV alarm, SP alarm, deviation alarm, output alarm, or velocity alarm. -19999 to 30000 (Set a value within the input range.) Decimal point position depends on the input type	0		

For the parameter SP (target setpoint), 4 groups are displayed for the factory default. The number of groups can be changed by the setup parameter SPGR. (number of SP groups). For the alarm setpoint parameter, alarm-1 to -4 are displayed for the factory default. The number of alarms can be changed using the setup parameter ALNO. (number of alarms). To change the number of SP groups or alarms, see User's Manual. Use the following table to record SP and alarm setpoints.

Parameter	n=1	n=2	n=3	n=4
SP				
SUB				
PIDN				
A1				
A2				
A3				
A4				

n: group number

### SP-related Setting Parameter

Menu symbol: *SPS* (SPS)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>RT</i> (RT)	Remote input ratio	SP = Remote input x RT + Remote input bias 0.001 to 9.999 (Displayed only in cases where the communication is specified.)	1.000		STD
<i>RbS</i> (RBS)	Remote input bias	-100.0 to 100.0% of PV input range span (EUS) (Displayed only in cases where the communication is specified.)	0.0 % of PV input range span		
<i>UPR</i> (UPR)	SP ramp-up rate	Used to prevent SP from changing suddenly. Set a ramp-up rate or ramp-down rate per hour or minute. Set a time unit using the parameter TMU.	OFF		EASY
<i>dNR</i> (DNR)	SP ramp-down rate	OFF, 0.0 + 1 digit to 100.0% of PV input range span (EUS)	OFF		
<i>TMU</i> (TMU)	SP ramp-rate time unit	HOURL: Ramp-up rate or ramp-down rate per hour MIN: Ramp-up rate or ramp-down rate per minute	HOURL		STD
<i>SPT</i> (SPT)	SP tracking selection	Tracking is performed when the mode changes from Remote to Local. (The local setpoint keeps track of the remote setpoint.) OFF, ON	ON		
<i>PVT</i> (PVT)	PV tracking selection	Causes the setpoint to keep track of the PV so the setpoint automatically reverts to its original value at a preset rate of change. The UPR, DNR, and TMU are used in combination. Operating conditions: 1) MAN → AUTO, 2) STOP → AUTO, 3) Power-on, 4) SP number change, 5) SP change OFF, ON	OFF		

### Alarm Function Setting Parameter

Menu symbol: *ALRM* (ALRM)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>AL</i> (AL1 to AL4)	Alarm-1 to 4 type Example: Alarm-1  Latch action Energized/De-energize Stand-by action	Set a 5-digit value in the following order. [Latch action (0/1/2/3/4)] + [Energized (0) or De-energized (1)] + [Without (0) or With (1) Stand-by action] + [Alarm type: 2 digits (see below)] For latch action, see User's Manual.  Alarm type: 2 digits 00: Disable 01: PV high limit, 02: PV low limit 03: SP high limit, 04: SP low limit 05: Deviation high limit 06: Deviation low limit 07: Deviation high and low limits 08: Deviation within high and low limits 09: Target SP high limit 10: Target SP low limit 11: Target SP deviation high limit 12: Target SP deviation low limit 13: Target SP deviation high and low limits 14: Target SP deviation within high and low limits 15: OUT high limit, 16: OUT low limit 19: Analog input PV high limit 20: Analog input PV low limit 29: PV velocity 30: Fault diagnosis 31: FAIL	AL1, AL3: Latch action (0) PV high limit (01) Without Stand-by action (0) Energized (0)  AL2, AL4: Latch action (0) Energized (0) Without Stand-by action (0) PV low limit (02)	Table below	EASY

<i>VT</i> (VT1 to VT4)	PV velocity alarm time setpoint 1 to 4	0.01 to 99.59 (minute.second)	1.00	Table below	EASY
<i>HY</i> (HY1 to HY4)	Alarm-1 to -4 hysteresis	Set a display value of setpoint of hysteresis. -19999 to 30000 (Set a value within the input range.) Decimal point position depends on the input type. When the decimal point position for the input type is set to "1", the initial value of the hysteresis is "1.0".	10		
<i>DYN</i> (DYN1 to DYN4)	Alarm-1 to -4 On-delay timer	An alarm output is ON when the delay timer expires after the alarm setpoint is reached. 0.00 to 99.59 (minute.second)	0.00	Table below	STD
<i>AMD</i> (AMD)	Alarm mode	0: Always active 1: Not active in STOP mode 2: Not active in STOP or MAN mode	0		

For the alarm function setting parameter, 4 alarms are displayed for the factory default. The number of alarms can be changed by the setup parameter ALNO. (number of alarms). To change the number of alarms, see User's Manual.

Parameter	n=1	n=2	n=3	n=4
ALn				
VTn				
HYn				
DYNn				

n: alarm number

### PV-related Setting Parameter

Menu symbol: *PVS* (PVS)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>BS</i> (BS)	PV input bias	-100.0 to 100.0% of PV input range span (EUS)	0.0 % of PV input range span		EASY
<i>FL</i> (FL)	PV input filter	OFF, 1 to 120 s	OFF		

### PID Setting Parameter

Menu symbol: *PI d* (PID)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>P</i> (P)	Proportional band	0.0 to 999.9% When 0.0% is set, it operates as 0.1%.	5.0%		EASY
<i>I</i> (I)	Integral time	OFF: Disable 1 to 6000 s	240 s		
<i>d</i> (D)	Derivative time	OFF: Disable 1 to 6000 s	60 s		
<i>OH</i> (OH)	Control output high limit	-4.9 to 105.0%, (OL<OH) In Heating/cooling control: 0.1 to 105.0% (OL<OH)	100.0%		
<i>OL</i> (OL)	Control output low limit	-5.0 to 104.9%, (OL<OH), SD: Tight shut	0.0%		
<i>MR</i> (MR)	Manual reset	Enabled when integral time is OFF. The manual reset value equals the output value when PV = SP. -5.0 to 105.0%	50.0%		EASY
<i>HYS</i> (HYS)	Hysteresis (in ON/OFF control)	In ON/OFF control: 0.0 to 100.0% of PV input range span (EUS)	In ON/OFF control: 0.5 % of PV input range span		
<i>HYUP</i> (HY.UP)	Upper-side hysteresis (in ON/OFF control)	0.0 to 100.0% of PV input range span (EUS)	0.5 % of PV input range span		
<i>HYLO</i> (HY.LO)	Lower-side hysteresis (in ON/OFF control)		0.5 % of PV input range span		
<i>DR</i> (DR)	Direct/reverse action switch	RVS: Reverse action DIR: Direct action	RVS		STD
<i>PO</i> (PO)	Preset output	In STOP mode, fixed control output can be generated.	0.0%		EASY

For the PID setting parameter, 4 groups are displayed for the factory default. The number of groups can be changed by the setup parameter PIDG. (number of PID groups). To change the number of PID groups, see User's Manual.

If you are using two or more groups of PID parameters, use the following table to record their setting values.

Parameter	n=2	n=3	n=4	R
P				
I				
D				
OH				
OL				
MR				

HYS				
HYUP				
HYLO				
DR				
PO				

n: group number

### Tuning Parameter

Menu symbol: *TUNE* (TUNE)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>SC</i> (SC)	Super function	OFF: Disable 1: Overshoot suppressing function (normal mode) 2: Hunting suppressing function (stable mode) Enables to answer the wider characteristic changes compared with response mode. 3: Hunting suppressing function (response mode) Enables quick follow-up and short converging time of PV for the changed SP. 4: Overshoot suppressing function (strong suppressing mode) Note: Setpoints 2 and 3 must be used in PID control or PI control. Disabled in the following controls: 1) ON/OFF control, 2) PD control, 3) P control. Do not use the function for the control processes with response such as flow or pressure control.	OFF		EASY
<i>ATTY</i> (ATTY)	Auto-tuning type	0: Normal 1: Stability	0		STD
<i>AR</i> (AR)	Anti-reset windup (excess integration prevention)	AUTO, 50.0 to 200.0%	AUTO		
<i>OPR</i> (OPR)	Output velocity limiter	OFF: Disable 0.1 to 100.0%/s	OFF		
<i>MPON</i> (MPON)	Manual preset output number selection	Select the output used in MAN mode when switched from AUTO to MAN mode. OFF: Hold the control output in AUTO mode (bumpless) 1: Use manual preset output 1 (output bump) 2: Use manual preset output 2 (output bump) 3: Use manual preset output 3 (output bump) 4: Use manual preset output 4 (output bump) 5: Use manual preset output 5 (output bump)	OFF		STD
<i>MPO</i> (MPO1 to MPO5)	Manual preset output 1 to 5	-5.0 to 105.0% However, output is limited to the output high limit and low limit.	0.0%	Table below	

Use the following table to record the manual preset output setting value.

Parameter	n=1	n=2	n=3	n=4	n=5
MPOn					

### Zone Control Parameter

Menu symbol: *ZONE* (ZONE)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>RP</i> (RP1 to RP3)	Reference point 1 to 3	Set reference points at which switching is carried out between groups of PID constants according to the given temperature zone. 0.0 to 100.0% of PV input range (EU) (RP1 ≤ RP2 ≤ RP3)	100.0% of PV input range	Table below	STD
<i>RHY</i> (RHY)	Zone PID switching hysteresis	Hysteresis can be set for switching at a reference point. 0.0 to 10.0% of PV input range span (EUS)	0.5 % of PV input range span		
<i>RDV</i> (RDV)	Reference deviation	Set a deviation from SP. The PID for reference deviation is used if there is a larger deviation than the preset reference deviation. OFF: Disable 0.0 + 1 digit to 100.0% of PV input range span (EUS)	OFF		

For Zone control, set the setup parameter ZON (zone PID selection) to Zone PID selection.


Use the following table to record the reference point setting value.

Parameter	n=1	n=2	n=3
RPn			

## Setup Parameters

Hold down the PARA key and Left arrow key simultaneously for 3 seconds to move from the Operation Display or Operation Parameter Setting Display to the Setup Parameter Setting Display.

Press the DISP key once to return to the Operation Display.

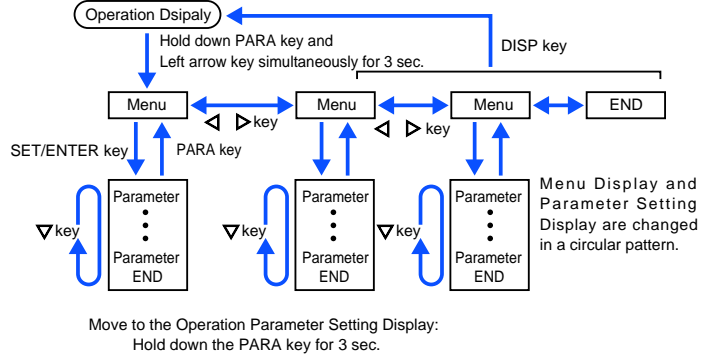

### Operation for Setting

- To select the parameter setting displayed as the initial value, press the Down arrow key to move to the next parameter.
- To change and set the parameter setting, press the SET/ENTER key to start the set-point blinking. The blinking state allows you to make changes (setting mode). Use the Up/Down/Left/Right arrow keys to change the setpoint. Press the SET/ENTER key to register the setting.

Note that there are some parameters which are not displayed depending on the Model and Suffix codes, control type (CNT), etc. The parameters for professional setting mode (LEVL: PRO) are not described in this manual. See User's Manual.

### Control Function Setting Parameter

Menu symbol: **CTL** (CTL)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>CNT</b> (CNT)	Control type	PID: PID control ONOF: ON/OFF control (1 point of hysteresis) ONOF2: ON/OFF control (2 points of hysteresis)	PID		EASY
<b>SPGR</b> (SPGR.)	Number of SP groups	Set a number of SP groups to use. 1 to 4	4		STD
<b>ZON</b> (ZON)	Zone PID selection	If set to "SP group number selection," allows PID constants to be selected for each SP group. If set to "Zone PID selection," automatically selects PID constants according to the range set in the Reference point. 0: SP group number selection 1 1: Zone PID selection (selection by PV) 2: Zone PID selection (selection by target SP) 3: SP group number selection 2 4: Zone PID selection (selection by SP)	0		
<b>PIDG</b> (PIDG.)	Number of PID groups	Set a number of PID groups to use. 1 to 4	4		

### PV Input Setting Parameter

Menu symbol: **PV** (PV)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>IN</b> (IN)	PV input type	OFF: Disable K1: -270.0 to 1370.0 °C / -450.0 to 2500.0 °F K2: -270.0 to 1000.0 °C / -450.0 to 2300.0 °F K3: -200.0 to 500.0 °C / -200.0 to 1000.0 °F J: -200.0 to 1200.0 °C / -300.0 to 2300.0 °F T1: -270.0 to 400.0 °C / -450.0 to 750.0 °F T2: 0.0 to 400.0 °C / -200.0 to 750.0 °F B: 0.0 to 1800.0 °C / 32 to 3300 °F S: 0.0 to 1700.0 °C / 32 to 3100 °F R: 0.0 to 1700.0 °C / 32 to 3100 °F N: -200.0 to 1300.0 °C / -300.0 to 2400.0 °F E: -270.0 to 1000.0 °C / -450.0 to 1800.0 °F L: -200.0 to 900.0 °C / -300.0 to 1600.0 °F U1: -200.0 to 400.0 °C / -300.0 to 750.0 °F U2: 0.0 to 400.0 °C / -200.0 to 1000.0 °F W: 0.0 to 2300.0 °C / 32 to 4200 °F PL2: 0.0 to 1390.0 °C / 32.0 to 2500.0 °F P2040: 0.0 to 1900.0 °C / 32 to 3400 °F WRE: 0.0 to 2000.0 °C / 32 to 3600 °F JPT1: -200.0 to 500.0 °C / -300.0 to 1000.0 °F JPT2: -150.0 to 150.0 °C / -200.0 to 300.0 °F PT1: -200.0 to 850.0 °C / -300.0 to 1560.0 °F PT2: -200.0 to 500.0 °C / -300.0 to 1000.0 °F PT3: -150.0 to 150.0 °C / -200.0 to 300.0 °F 0.4-2V: 0.400 to 2.000 V 1-5V: 1.000 to 5.000 V 4-20: 4.00 to 20.00 mA 0-2V: 0.000 to 2.000 V 0-10V: 0.00 to 10.00 V 0-20 : 0.00 to 20.00 mA -1020: -10.00 to 20.00 mV 0-100: 0.0 to 100.0 mV	OFF		EASY
<b>UNIT</b> (UNIT)	PV input unit	--: No unit, C: Degree Celsius --: No unit, --: No unit, --: No unit, F: Degree Fahrenheit	C		

<b>RH</b> (RH)	Maximum value of PV input range	Depends on the input type. - For temperature input - Set the temperature range that is actually controlled. (RL<RH) - For voltage / current input - Set the range of a voltage / current signal that is applied. The scale across which the voltage/ current signal is actually controlled should be set using the maximum value of input scale (SH) and minimum value of input scale (SL). (Input is always 0% when RL = RH.)	Depends on the input type		EASY
<b>RL</b> (RL)	Minimum value of PV input range		Depends on the input type		
<b>SDP</b> (SDP)	PV input scale decimal point position	0: No decimal place 1: One decimal place 2: Two decimal places 3: Three decimal places 4: Four decimal places	Depends on the input type		
<b>SH</b> (SH)	Maximum value of PV input scale	-19999 to 30000, (SL<SH),   SH - SL   ≤ 30000	Depends on the input type		
<b>SL</b> (SL)	Minimum value of PV input scale		Depends on the input type		STD
<b>BSL</b> (BSL)	PV input burnout action	OFF: Disable UP: Upscale DOWN: Downscale	Depends on the input type		
<b>AB5</b> (A.BS)	PV analog input bias	-100.0 to 100.0% of each input range span (EUS)	0.0 % of PV input range span		
<b>RFL</b> (A.FL)	PV analog input filter	OFF, 1 to 120 s	OFF		

W: W-5% Re/W-26% Re(Hoskins Mfg.Co.). ASTM E988, WRE: W97Re3-W75Re25

### Input Range, SP Limiter Setting Parameter

Menu symbol: **MPV** (MPV)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>PLNI</b> (P.UNI)	Control PV input unit	--: No unit C: Degree Celsius --: No unit, --: No unit, --: No unit, F: Degree Fahrenheit	Same as PV input unit		STD
<b>PDP</b> (PDP)	Control PV input decimal point position	0: No decimal place 1: One decimal place 2: Two decimal places 3: Three decimal places 4: Four decimal places	Depends on the input type		
<b>PRH</b> (P.RH)	Maximum value of control PV input range	-19999 to 30000, (P.RL<P.RH),   P.RH - P.RL   ≤ 30000	Depends on the input type		
<b>PRL</b> (P.RL)	Minimum value of control PV input range		Depends on the input type		
<b>SPH</b> (SPH)	SP high limit	0.0 to 100.0% of PV input range (EU), (SPL<SPH)	100.0 % of PV input range		
<b>SPL</b> (SPL)	SP low limit		0.0 % of PV input range		

### Output Setting Parameter

Menu symbol: **OUT** (OUT)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>CT</b> (CT)	Control output cycle time	0.5 to 1000.0 s	30.0 s		EASY
<b>OUR</b> (OU.A)	OUT current output range	4-20: 4 to 20 mA, 0-20: 0 to 20 mA 20-4: 20 to 4 mA, 20-0: 20 to 0 mA	4-20		STD

### RS-485 Communication Setting Parameter (E1-terminal Area)

Menu symbol: **R485** (R485)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>PSL</b> (PSL)	Protocol selection	PCL: PC link communication PCLSM: PC link communication (with checksum) LADR: Ladder communication CO-M: Coordinated master station CO-S: Coordinated slave station MBASC: Modbus (ASCII) MBRTU: Modbus (RTU) CO-S1: Coordinated slave station (Loop-1 mode) CO-S2: Coordinated slave station (Loop-2 mode) P-P: Peer-to-peer communication	MBRTU		EASY
<b>BPS</b> (BPS)	Baud rate	600: 600 bps, 1200: 1200 bps 2400: 2400 bps, 4800: 4800 bps 9600: 9600 bps, 19200: 19.2k bps 38400: 38.4k bps	19200		
<b>PR</b> (PRI)	Parity	NONE: None EVEN: Even ODD: Odd	EVEN		
<b>STP</b> (STP)	Stop bit	1: 1 bit, 2: 2 bits	1		
<b>DLN</b> (DLN)	Data length	7: 7 bits, 8: 8 bits	8		
<b>ADR</b> (ADR)	Address	1 to 99	1		

### Key Action Setting Parameter

Menu symbol: **KEY** (KEY)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>FN</b> (Fn)	User function key-n action setting	OFF: Disable A/M: AUTO/MAN switch R/L1: REM/LCL switch S/R: STOP/RUN switch AUTO: Switch to AUTO MAN: Switch to MAN REM1: Switch to REM LCL1: Switch to LCL STOP: Switch to STOP RUN: Switch to RUN AT: Auto-tuning LTUP: LCD brightness UP LTDN: LCD brightness DOWN BRI: Adjust LCD brightness LCD: LCD backlight ON/OFF switch LAT: Latch release PID: PID tuning switch	PID		EASY

### Display Function Setting Parameter

Menu symbol: **DISP** (DISP)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>PCMD</b> (PCMD)	Active color PV display switch	0: Fixed in white 1: Fixed in red 2: Link to alarm 1 (Alarm OFF: white, Alarm ON: red) 3: Link to alarm 1 (Alarm OFF: red, Alarm ON: white) 4: Link to alarm 1 or 2 (Alarm OFF: white, Alarm ON: red) 5: Link to alarm 1 or 2 (Alarm OFF: red, Alarm ON: white) 6: PV limit (Within range: white, Out of range: red) 7: PV limit (Within range: red, Out of range: white) 8: SP deviation (Within deviation: white, Out of deviation: red) 9: SP deviation (Within deviation: red, Out of deviation: white)	0		EASY
<b>PCH</b> (PCH)	PV color change high limit	Set a display value when in PV limit or SP deviation. -19999 to 30000 (Set a value within the input range.) Decimal point position depends on the input type.	0		STD
<b>PCL</b> (PCL)	PV color change low limit		0		
<b>BAR1</b> (BAR1)	Bar-graph display registration	0: Disable 1: OUT, 3: PV, 4: SP 5: Deviation 6 to 16: Disable 18: PV terminals analog input 27: TSP, 28: TSP deviation	5		
<b>BDV</b> (BDV)	Bar-graph deviation display band	0.0 to 100.0% of PV input range span (EUS)	1.0 % of PV input range span		
<b>GUID</b> (GUID)	Guide display ON/OFF	OFF: Nondisplay, ON: Display	ON		
<b>ECO</b> (ECO)	Economy mode	OFF: Disable 1: Economy mode ON (All indications except PV display OFF) 2: Economy mode ON (All indications OFF) 3: Brightness 10 % (whole indication)	OFF		
<b>BRI</b> (BRI)	Brightness	(Dark) 1 to 5 (Bright)	3		EASY
<b>MLSD</b> (MLSD)	Least significant digital mask of PV display	OFF: With least significant digit ON: Without least significant digit	OFF		STD
<b>MKLP</b> (MKTP)	Method for least significant digital mask of PV display	0: Rounding, 1: Rounding-off	0		STD

### SELECT Display Setting Parameter

Menu symbol: **CSEL** (CSEL)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>CS1 to CS5</b> (CS1 to CS5)	SELECT Display-1 to -5 registration	Register the operation parameter (except the Operation Mode) that is frequently modified to display it in the Operation Display. OFF, 2301 to 5000 For the setting range, see User's Manual.	OFF	Table below	STD

Use the following table to record SELECT Display setting value.

Parameter	n=1	n=2	n=3	n=4	n=5
CSn					

### Key Lock Setting Parameter

Menu symbol: **KLOC** (KLOC)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>COMW</b> (COM.W)	Communication write enable/disable	OFF: Enable, ON: Disable	OFF		STD
<b>DATA</b> (DATA)	Front panel parameter data (▼,▲) key lock		OFF		
<b>A/M</b> (A/M)	Front panel A/M key lock	OFF: Unlock, ON: Lock	OFF		

### AL1-AL2 Function Registration Parameter

Menu symbol: **ALM** (ALM)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>AL1S</b> (AL1.S)	AL1 function selection	Set an I relay number. For the items other than below, see User's Manual. Ex.) Set the number 4353 for AL1.S to use the alarm 1. Set "OFF" to disable the function.	4353		STD
<b>AL2S</b> (AL2.S)	AL2 function selection	No function: OFF Alarm 1: 4353, Alarm 2: 4354 Alarm 3: 4355, Alarm 4: 4357 AUTO (OFF) / MAN (ON) status: 4193 REM (ON) / LCL (OFF) status: 4194 STOP (ON) / RUN (OFF) status: 4195 FAIL (Normally ON) output: 4256	4354		

### System Setting Parameter

Menu symbol: **SYS** (SYS)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>RMD</b> (R.MD)	Restart mode	Set how the controller should recover from a power failure of 5 seconds or more. CONT: Continue action set before power failure. MAN: Start from MAN. AUTO: Start from AUTO.	CONT		STD
<b>RTM</b> (R.TM)	Restart timer	Set time between power on and the instant where controller starts computation. 0 to 10 s	0		
<b>EPO</b> (EPO)	Input error preset output	Set preset output value when the input burnout or ADC error occurs. Manual output is prioritized when the input burnout occurs in MAN. 0: Preset output 1: 0% output 2: 100% output	0		EASY
<b>FREQ</b> (FREQ)	Power frequency	AUTO, 60: 60 Hz, 50: 50 Hz	AUTO		
<b>QSM</b> (QSM)	Quick setting mode	OFF: Disable ON: Enable	ON		
<b>LANG</b> (LANG)	Guide display language	ENG: English, FRA: French GER: German, SPA: Spanish	Depe-nds on the model and suffix codes		
<b>PASS</b> (PASS)	Password setting	0 (No password) to 65535	0		

### Error and Version Confirmation Parameter (for display only)

Menu symbol: **VER** (VER)

Parameter symbol	Name of Parameter	Status record	Display level
<b>PRER</b> (PA.ER)	Parameter error status		
<b>OPER</b> (OP.ER)	Option error status		
<b>AD1E</b> (AD1.E)	A/D converter error status 1		
<b>PV1E</b> (PV1.E)	PV input error status		
<b>MCU</b> (MCU)	MCU version		EASY
<b>DCU</b> (DCU)	DCU version		
<b>ECU1</b> (ECU1)	ECU-1 version (E1-terminal area)		
<b>PARA</b> (PARA)	Parameter version		
<b>HVER</b> (H.VER)	Product version		
<b>SER1</b> (SER1)	Serial number 1		
<b>SER2</b> (SER2)	Serial number 2		

### Parameter Display Level Parameter

Menu symbol: **LVL** (LVL)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>LEVL</b> (LEVL)	Parameter display level	EASY: Easy setting mode STD: Standard setting mode PRO: Professional setting mode	STD		EASY

\* For Professional setting mode, see User's Manual.

Trademarks
● Our product names or brand names mentioned in this manual are the trademarks or registered trademarks of Yokogawa Electric Corporation.
● Adobe, Acrobat, and Postscript are either registered trademarks or trademarks of Adobe Systems Incorporated.
● Modbus is a registered trademark of Schneider Electric.
● We do not use the TM or ® mark to indicate these trademarks or registered trademarks in this manual.
● All other product names mentioned in this manual are trademarks or registered trademarks of their respective companies.