

Installation instructions Aseptoflex Vario adapter with O-ring / PEEK sealing ring

> E332xx E333xx

UK

1 Installation sensor - adapter

 Grease the sensor thread with paste (A). The paste must be suitable and approved for the application and compatible with the elastomers used. Place the sealing ring (B) in the groove (C) of the sensor.
Screw the sensor into the adapter until it is hand-tight. When doing so, avoid mechanical effects on the sealing areas, the hygienic area and the pressure measuring cell.
 Clamp the sensor + adapter into a clamping device (D). Tighten the clamping device only slightly so that the adapter does not warp. Tighten the sensor using a spanner until you can feel the end stop (this corresponds to a maximum tightening torque of 35 Nm). Note: Further tightening may affect the sealing effect.

The adapter is supplied with an EPDM O-ring. More sealing rings are available as accessories:

- FKM O-ring, order no. E30123.
- PEEK sealing ring, order no. E30124.



Use a new adapter when changing from a PEEK seal to O-ring sealing.

2 Mounting to the process connection

Fix the sensor + adapter are fixed to the process connection using a fixing element (coupling nut, clamp flange, etc.).

If it is not possible to slide the fixing element down over the top of the unit: slide it up over the bottom of the unit before the adapter is mounted.



Use in hygienic areas to EHEDG:

Make sure that the sensors are integrated into the system in accordance with EHEDG.